


## Safety


- Do not route the cables out of the sides of the amp pocket. Do not leave the amp pocket unzipped.

### Correct rain cover usage


- Use the speaker in upright or kickback orientations only.

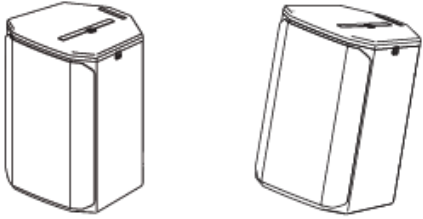


- Do not use the speaker in monitor mode in damp or wet conditions.

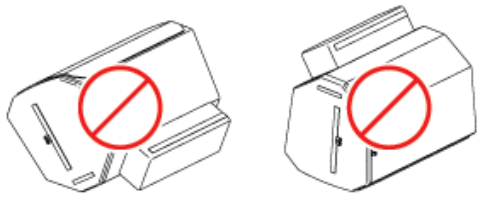

- Route the cables out the of bottom of the amp pocket. Make sure that the zippers are tight around the cables.

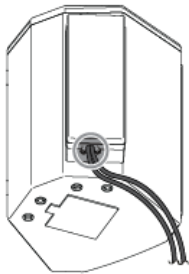

- Do not submerge the speaker in water or spray with a water hose.

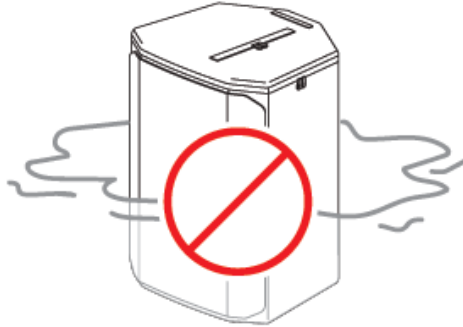


### Cleaning and drying instructions

- Clean with a damp cloth.
- Air-dry only.
- Do not machine wash.
- Do not tumble dry.

### Drain holes

The EVERSE 8 rain cover was designed with four drain holes. The goal is to drain any water that may penetrate the inside of the rain cover.

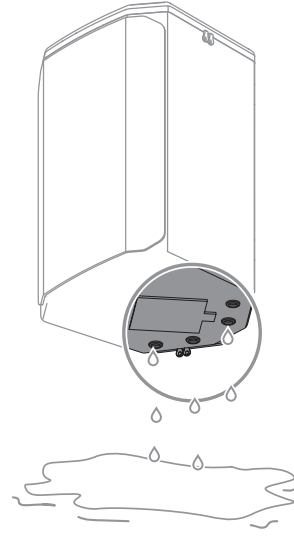

### IP rating

The EVERSE 8 with the rain cover installed is rated for IP44, but only in upright and kickback orientations, and only when used properly as defined in these instructions.

Some water may pool at the bottom of the rain cover when exposed for an extended period of time. Remove the speaker from the bag to allow both to dry properly. When using the rain cover, the weatherized input cover is optional to achieve the IP44 rating.

### Weatherization


When the rain cover is installed, the EVERSE 8 loudspeaker is designed to be weather resistant to IP44 standards, but not waterproof. The weather resistance may be reduced by damage, repair, improper disassembly, and regular wear and tear. Always inspect the EVERSE 8 and accessories before and after every use. Allow the loudspeaker and components to dry before storage or between uses.

The EVERSE 8 loudspeaker with rain cover installed is intended only for temporary use in wet or damp environments. The loudspeaker is not intended to be exposed continuously to moisture over long periods of time. Do not expose to salt water or spray, do not expose to chlorine or use in high chlorine environments.


## Using the rain cover

### To use the rain cover:


1. Unzip the rain cover and insert the speaker. Make sure the grill is facing the front flap.

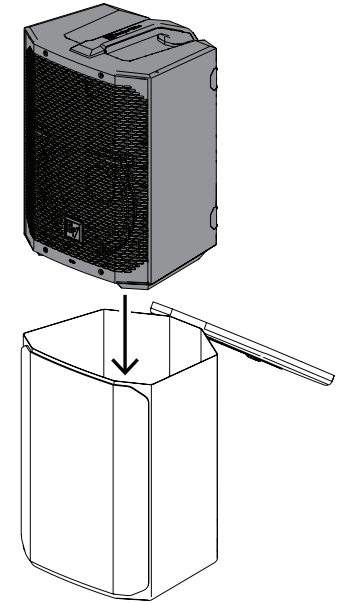

2. Zip the rain cover.

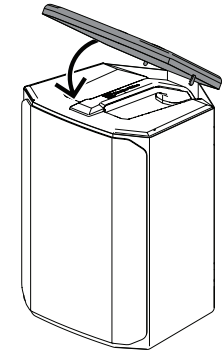


3. Lift the front flap, fold the margin and attach it to the top hook and loop strip.

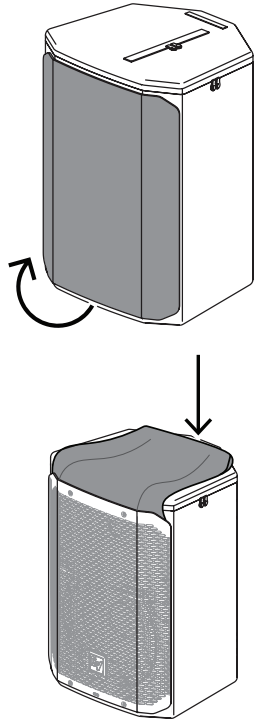


#### To use the speaker in tripod position:

1. Open the bottom flap of the rain cover.

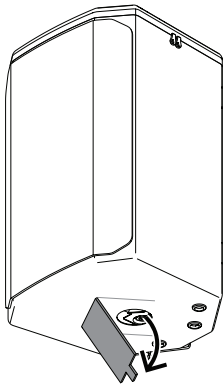

2. Insert the speaker on a tripod.

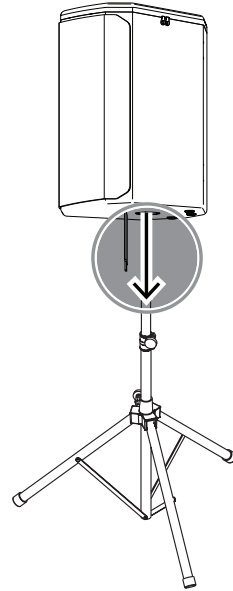


#### To connect the speaker:

1. Unzip the amp pocket in the back of the rain cover.
2. Make the necessary connections.
3. Zip the amp pocket.

#### To transport the speaker:


- ▶ Unzip the handle pocket and use the pocket to grab the handle.  
The pocket goes under the handle.

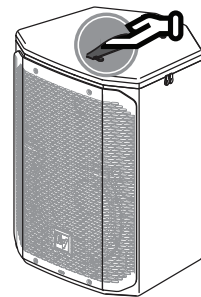

#### Technical data

	EVERSE8-RAINCVR Rain resistant cover for EVERSE 8
Color	Black
Material	600D poly with waterproof and hydrophobic treated lycra cloth
IP rating	IP44
Dimensions (H x W x D) (mm)	400 mm x 285 mm x 280 mm
Dimensions (H x W x D) (in)	15.75 in x 11.22 in x 11.02 in
Shipping dimensions (H x W x D) (mm)	480 mm x 425 mm x 28.5 mm
Shipping dimensions (H x W x D) (in)	18.9 in x 16.7 in x 1.12 in
Weight (g)	370 g
Weight (lb)	0.82 lb
Shipping weight (g)	420 g
Shipping weight (lb)	0.93 lb

## EVERSE8 Rain cover EVERSE8-RAINCVR

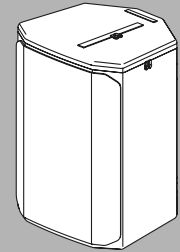

Quick user guide

