



# 

## Avonic PTZ Camera 20x zoom

CM70-NDI

www.avonic.com | User Manual | Version 1.2

## Disclaimer, Contact, IP Rating and CE Marking

#### Disclaimer

All text, graphics, photographs, trademarks, logos, artwork and computer code (collectively, "Content"), including but not limited to the design, structure, selection, coordination, expression, "look and feel" and arrangement of such Content, contained in this Manual is owned, controlled or licensed by or to Avonic, and is protected by trade dress, copyright, patent and trademark laws, and various other intellectual property rights and unfair competition laws.

Except as expressly provided in these Terms of Use, no Content of this Manual may be copied, reproduced, republished, uploaded, posted, publicly displayed, encoded, translated, transmitted or distributed in any way (including "mirroring") to any other computer, server, Web site or other medium for publication or distribution or for any commercial enterprise, without the prior written consent of Avonic.

#### Copyright © 2022 AVONIC All Rights Reserved.

The information contained in this Manual is subject to change without notice.

#### Contact Info

For any questions or suggestions, contact your reseller or local distributor of Avonic. Visit the Avonic website *www.avonic.com* to find your local Avonic distributor or to download the most recent version of the documentation.

#### Join Avonic on Social Media



www.Facebook.com/ avonicPTZ



www.LinkedIn.com/company/ avonic



#### **IP Rating**

The IP Rating (ingress protection) for this Product is IP30. This means that the Product has an intrusion protection against solid objects over 2.5mm, e.g. tools & wires and has no moisture protection.

#### **CE Marking**

The Product has a CE Marking. The CE labels are placed at the bottom of the Product and on the packaging. See the respective figures below:



Figure 1: CE Marking (Product)



Figure 2: CE Marking (Packaging)

## EU Declaration of Conformity

The Avonic Declaration of Conformity is in accordance with EN ISO/IEC 17050-1 and generated using the ProductIP compliance platform.

#### **Table 1: EU Declaration of Conformity**

Declaration number:	DOCIP 819694						
Name and address of manufacturer / EU-AR:	Avonic Exportweg 11a 2645ED Delfgauw Netherlands	-					
THIS DECLARATION OF CONFORMITY IS ISSUED UNDER THE SOLE RESPONSIBILITY OF:							
Name and address of manufacturer:	Avonic Exportweg 11a 2645ED Delfgauw Netherlands						
Product identification:	PTZ Camera 12x/20x/30x Zoom White AV-CM7x						
THE PRODUCTS MENTIONED	IN THIS DECLARATION ARE IN CONFORMITY WITH:						
EU Community Legislation	Restriction of Hazardous Substances (RoHS) Directive 2011/65/EU [OJEU L174/88-110, 01.07.2011] Electromagnetic Compatibility (EMC) Directive 2014/30/ EU [OJEU L96/79-106, 29.03.2014] Ecodesign energy-related products Directive 2009/125/EC [OJEU L285/10-35, 31.10.2009] Low Voltage Directive (LVD) 2014/35/ EU [OJEU L96/357-374, 29.03.2014]						
Harmonised standards	<b>Safety of electrical equipment</b> EN 60065:2014 + AC:2016 +AC:2017 + AC:2017 + AC:2018						
	Electromagnetic Compatibility (EMC) EN 55020:2007 + A11:2011 + A12:2016 EN 55032:2015 + AC:2016 EN 55035:2017 EN 61000-3-2:2014 EN 61000-3-3:2013						
	Restricted substances in electrical products EN 50581:2012 EN IEC 63000:2018						
	<b>Ecodesign</b> Regulation (EC) 278/2009 - Ecodesign of external power supplies (EPS)						
Other specifications:							
Notified Body:							
Additional Information:							
SIGNED FOR AND ON BEHALF	OF:						
Place and date of issue:	Delfgauw, 24 October 2019						
Signatures	Allow						
Signature: Name, function:	Walter Harrewijn, CEO						
Company name:	Avonic						

## Important Information

## Liability

Avonic will NOT be held responsible for any damage or injury caused by unqualified persons carrying out these tasks, or by not following the instructions in this Manual.

## Intended Use and Non-Intended Use Installation

1	1	Λ.
L	÷	7

/|\

The following applies to the *installation* of the camera:

- The installation activities described in this Manual should ONLY be executed by experienced technicians.
- The installation activities should NOT be executed by minors, mentally disabled persons or other persons not qualified to perform these tasks.

## Operation

- The following applies to the *operation* of the camera:
  - The operational activities described in this Manual should ONLY be executed by people with enough technical knowledge to perform the activities in a safe manner.
  - This Product is specifically developed for video conferencing / streaming via internet by companies, institutes and universities. It is NOT meant for private use in the residential area.
  - This Product should ONLY be used indoors.
  - This Product is NOT a medical device and should NOT be used as a substitute for professional medical judgment. It is NOT designed or intended for use in the diagnosis of disease or other conditions, or in the cure, mitigation, treatment, or prevention of any condition or disease. Please consult your healthcare provider prior to making any decisions related to your health.

## **Important Precautions**

This Product is NOT intended for use where failure of the device could lead to death, personal injury, or severe environmental damage.
 Be sure that you have COMPLETELY READ and UNDERSTOOD ALL information in this Manual before unpacking, installing and using this Product. Keep the Manual in a safe place for future reference or download it from www.avonic.com.
 Failure to follow the SAFETY NOTES as described in this chapter could result in fire, electric shock, injury, or damage to this Product or other property.
 Power this Product ONLY with the included cable and power adapter. Other adapters may not meet applicable safety standards, and could pose a risk of death or injury when connected.

## Symbols Used in This Manual

Symb	ol Meaning	Description	
DangerNot following the instructions associated with this symbol may lead to injury and / or serious damage to the Product.		Not following the instructions associated with this symbol may lead to personal injury and / or serious damage to the Product.	
		Not following the instructions associated with this symbol may lead to life- threatening situations and / or serious damage to the Product.	



	Symbol	Meaning	Description		
	$\triangle$	Important The information associated with this symbol requires special attention.			
	<b>I</b> nformation The information associated with symbol refers to a general remark or a reference to other documentation.		· · ·		
Instruction         This symbol refers to one or more user instructions.		This symbol refers to one or more user instructions.			
	4	Recycling	Specific parts of the Product can be re-used.		

## Acronyms

The following acronyms are used in this Manual:

AAE	Aperture Auto Exposure
AWB	Aperture White Balance
BLC	Black Light Control
ССМ	Customizable Color Matrix
CMOS	Complementary Metal Oxide Semiconductor
DRC	Dynamic Range Compression
EV	Exposure Value
HD	High Definition
HDMI	High-Definition Multimedia Interface
IP	Internet Protocol
MJPEG	Motion-JPEG
NDI	Network Device Interface
NR	Noise Reduction
OSD	On-Screen Display
PoE	Power over Ethernet
РТΖ	Pan / Tilt / Zoom
RTMP	Real-Time Messaging Protocol
RTSP	Real-Time Streaming Protocol
SAE	Shutter Auto Exposure
SDI	Serial Digital Interface
SKU	Stock Keeping Unit
SNR	Signal to Noise Ratio
SRT	Secure Reliable Transport
UDP	User Datagram Protocol

## Contents

Disclaimer, Contact, IP Rating and CE Marking	ii
EU Declaration of Conformity	iii
Important Information	iv
Liability	iv
Intended Use and Non-Intended Use	iv
Installation	iv
Operation	
Important Precautions	
Symbols Used in This Manual	
Acronyms	
Introduction	
Purpose of This Manual	
Target Audience	
Document Structure	
Safety Instructions	
Important Precautions	
Intended Use	
Handling	
Mounting Ventilation	
Repair	
Power and Adapter	
Atmospheric Conditions	
Product Overview	
Description.	
Features	
Unpacking	
Package Contents	
Handling Precautions	
Unpacking the Camera	
Return Procedure	
Mounting and Installation	
Mounting on Wall or Ceiling	
Connecting the Components to the Camera	
Balanced Audio Connection	
Connecting a Controller to a Camera	. 17
Connecting via USB, HDMI or SDI	. 17
Serial Connecting via RS-232 or RS-485	. 18
Connecting via NDI®   HX/ LAN	.19
Operation	.21
WebGUI	.21
Login	. 21
LOCAL	
AUDIO	
VIDEO	
Using the Remote Control	
a. Power	
b. Set	
c. Camera Select d. Number Keys	
	. 40

## A V O N I C

e. Focus +	46
f. Auto/Manual Focus	46
g. Zoom +	47
h. Set & Clear Preset	
i. PTZ Keys (up/down/left/right)	
j. Home	47
k. BLC ON/OFF	
I. Menu	
m. Function Keys (F1/F2/F3/F4)	
n. Blank Buttons	
Other Key Combinations	
OSD Menu	
1. MENU	
2. SETUP	
3. CAMERA	
3.1 EXPOSURE.	
3.2 COLOR	
3.3 IMAGE	
3.4 FOCUS.	
3.5 NOISE REDUCTION	
3.6 STYLE	
4. PTZ	
6. NETWORK SETTINGS	
7. VERSION.	
8. RESTORE DEFAULT	
Using the Select Switch	55
Maintenance	56
Camera Maintenance	56
Usage Precautions	56
Transport and Storage	57
Disposal and Recycling	58
Troubleshooting	
General	
Power Issues	
Image No image	
Abnormal image	
Dithering or flickering image	
Color issues	
Autofocus Issues	
Control	
No self-test (PTZ cameras only) and no power LED	
Remote Controller does not work	
WebGUI.	
Cannot enter WebGUI	
Firmware update failed	60
Firmware update failed Appendix A - VISCA Settings and Command List	60 61
Firmware update failed Appendix A - VISCA Settings and Command List Visca over Serial Connection	60 61 61
Firmware update failed Appendix A - VISCA Settings and Command List Visca over Serial Connection VISCA over IP	60 61 61 61
Firmware update failed Appendix A - VISCA Settings and Command List Visca over Serial Connection VISCA over IP Visca over IP using the full Sony Visca protocol	60 61 61 63
Firmware update failed Appendix A - VISCA Settings and Command List Visca over Serial Connection VISCA over IP Visca over IP using the full Sony Visca protocol Camera Return Commands.	60 61 61 61 63 64
Firmware update failed Appendix A - VISCA Settings and Command List Visca over Serial Connection VISCA over IP Visca over IP using the full Sony Visca protocol Camera Return Commands Camera Control Commands	60 61 61 63 63 64 65
Firmware update failed Appendix A - VISCA Settings and Command List Visca over Serial Connection VISCA over IP Visca over IP using the full Sony Visca protocol Camera Return Commands.	60 61 61 63 63 64 65 71

## A V O N I C

Appendix	C - HTTP API	75
Ho	w to use HTTP API	75
	Curl	76
	{"GetEnv"}	77
PT	77	78
	PTZ speed7	78
	Speed by zoom	78
	Image Freezing	78
	Low power mode	79
	Zoom Speed7	79
	Preset Pan Speed	79
	Preset Tilt Speed	79
	Preset Zoom Speed	79
	Focus Mode7	79
	Preset	30
Au	dio8	30
Vid	eo	31
	Video encoder	31
	Video Streaming	32
	(RTP) Multicast Streaming	33
	Camera Settings	33
	Video OSD	
	Output Format	
	SRT	
Ne		
	Network configure and port settings	
	Ethernet 8	
	DNS	
	I9	
Sys	stem	
		91
	Time	
	User	
	Update	
	Default and Reboot	92
Appendix	D - CMOS Image Sensor Characteristics	93
Wh	ite Flecks	<del>)</del> 3
Alia	asing	<del>)</del> 3
Foo	al Plane	93
Fla	sh Bands	<del>)</del> 3
Flic	kerg	<del>)</del> 3

## Introduction

## **Purpose of This Manual**

This Manual describes the safety precautions and the instructions for safe unpackaging, installation, operation, maintenance and disposal of the Avonic CM70-NDI camera.

i

In this Manual, the Avonic CM70-NDI camera is referred to as the 'Product'.

## **Target Audience**

This Manual is developed for installation technicians who install the Product at client sites, and for IT professionals who are responsible for operating the Product.

## **Document Structure**

The Manual is subdivided into the following Chapters:

- **1.** Introduction
- 2. Safety
- **3.** Product Overview
- **4.** Unpacking
- 5. Mounting and Installation
- 6. Operation
- **7.** *Maintenance*
- 8. Transport and Storage
- 9. Disposal and Recycling

**10.***Troubleshooting* 

Additionally, it contains the following

- Appendix A VISCA Settings and Command List
- Appendix B Dimensions
- Appendix C HTTP API
- Appendix D CMOS Image Sensor Characteristics

## Safety Instructions

This chapter contains important safety information regarding the unpacking, installation and use of the camera.

## **Important Precautions**

This Product is NOT intended for use where failure of the device could lead to death, personal injury, or severe environmental damage.

Be sure that you have COMPLETELY READ and UNDERSTOOD ALL information in this Manual before unpacking, installing and using this Product. Keep the Manual in a safe place for future reference or download it from *www.avonic.com*.



Failure to follow the SAFETY NOTES as described in this chapter could result in fire, electric shock, injury, or damage to this Product or other property.

Power this Product ONLY with the included cable and power adapter. Other adapters may not meet applicable safety standards, and could pose a risk of death or injury when connected.

## Intended Use

H

Λ

∕∧

See section Intended Use and Non-Intended Use on page iv for details.

## Handling

- To prevent the risk of injury, take the following precautions when handling this Product:
- Handle the Product with care. It is made of metal, glass, and plastic and has sensitive electronic components inside.
- The Product can be damaged if dropped, burned, punctured or crushed, or if it comes into contact with liquid.
- Do not pick up and move the Product unit while a tripod is attached. The fitting may break under the weight of the tripod, which may result in injury.
- If you suspect any damage to the Product, discontinue its use, as it may cause overheating or injury.

## Mounting

To prevent the Product from falling down which may cause injuries:

- Set up this Product on a hard, stable surface or mount it to a wall or ceiling.
- ONLY use an Avonic mount for mounting to a wall or ceiling.
- Ensure the mounting construction is capable of supporting four times the weight of the Product. (See 'General Specifications > Weight product' in the Product Datasheet for the exact weight.)
- Use a safety loop or drop protection that prevents the Product from falling if the mounting construction fails.
- During installation, NEVER install a Product above a person.
- Check the installation at least once a year. An improper mounting could cause the unit to fall off, resulting in personal injury.

## Ventilation

To prevent the risk of life-threatening injury or damage to the Product or other property, caused by electric shock or fire hazard due to overheating:

- Maintain adequate ventilation by NOT installing or placing the Product unit in a bookcase, built-in cabinet or any other confined space.
- Ensure that curtains or any other material does NOT obstruct the ventilation.

## Repair

Take the following precautions if the Product should be repaired:

- Don't open this Product and don't attempt to repair it yourself. Disassembling the Product may damage it or may cause injury to you.
- If this Product is damaged, malfunctioning, or if it comes into contact with liquid, contact Avonic or an Avonic Authorized Service Provider.
- Repairs by service providers other than Avonic or an Avonic Authorized Service Provider may not involve the use of Avonic genuine parts and may affect the safety and functionality of the device. *You can find more information about repairs and service at www.avonic.com*.

## Power and Adapter

To prevent the risk of life-threatening injury or damage to the Product or other property, caused by electric shock or fire hazard:

- Power this Product ONLY with the included cable and power adapter. Other adapters may not meet the applicable safety standards. They could pose a risk of death or injury when connected.
- Do NOT use damaged cables.
- Do NOT power the Product in a moist / wet environment.
- Before you power the Product, ensure the cable is fully inserted into the power adapter.
- Plug the power adapter directly into a power outlet.
- Do NOT use the power adapter at a moist / wet location.
- Do NOT connector disconnect the power adapter with wet hands.
- Keep the Product, cable, and power adapter in a dry and well-ventilated area when in use.
- Stop using the power adapter and any cables if any of the following conditions exist:
  - The power adapter plug or prongs are damaged.
  - The cable becomes frayed or otherwise damaged.
  - The power adapter is exposed to excessive moisture, or liquid is spilled into it.
  - The power adapter has been dropped, and its enclosure is damaged.

## **Atmospheric Conditions**

To prevent the risk of injury or damage to the Product or other property caused by a potentially explosive atmosphere:

- Do NOT use this Product in an area with a potentially explosive atmosphere, such as areas where the air contains high levels of flammable chemicals, vapors, or particles (such as grain, dust, or metal powders), may be hazardous.
- Exposing this Product to environments having high concentrations of industrial chemicals, including near evaporating liquified gasses such as helium, may damage or impair this Product functionality.
- Obey all signs and instructions.

## Product Overview

## Description

The CM70-NDI is a high-quality PTZ camera with concurrent HDMI, 3G-SDI, USB 2.0 and IP stream ethernet outputs. The CM70-NDI is equipped with NewTek's high-efficient IP technology called NDI® | HX. This all-in-one PTZ camera from Avonic allows the move to an all IP infrastructure even for mobile applications. With IP deployment on existing networks all cameras detected within your network become directly available for use without complex configuration. Video, audio, control and power all with PoE connecting your CM70-NDI camera to hundreds of systems, devices and applications that support NDI. The CM70-NDI includes a rich feature set known from the CM70 series and has the ability to deliver outstanding quality even under low light conditions. The combination of a high-quality PTZ camera with a protocol that improves every live production give the CM70-NDI endless possibilities.



## Features

The Avonic CM70-NDI camera has the following features:

- High-quality glass lens, 20x optical zoom and 55.2° horizontal field of view.
- High SNR CMOS combined with Digital Noise Reduction (DNR) for a clear picture, even under very low light conditions.
- Full HD 1920 x 1080p60 resolution and Pristine image quality.
- The camera can be powered using Ethernet port with PoE (802.3af) functionality, accessed via WebGUI and controlled by VISCA over IP / Onvif and stream video.
- H265, H264, optional SRT and MJPEG compression at a bitrate up to 40Mbit, thus enabling Full HD video stream by ultra-low latency over RTSP, RTMP, UDP, Unicast, Multicast and NDI®| HX support.
- 3G-SDI, HDMI, USB 2.0 (1080p30) and IP.
- Camera control using common protocols: VISCA, Pelco-D / P via RS-232, RS-485, IP (VISCA, NDI® | HX), Onvif or IR.
- Remote control included.
- Supports up to 255 presets with 0.1° accuracy.
- Balanced audio input with embedding into IP stream, SDI and HDMI outputs.
- Configurable audio offset.
- Optional premium features: SRT streaming, Tally light, configurable Color Matrix. License AV-LC70-1 (sold separately).

## Unpacking

This describes the contents of a complete Product package, and instructions for safe unpacking and (if necessary) Product return.

It is subdivided into the following sections:

- 1. Package Contents
- 2. Handling Precautions
- 3. Unpacking the Camera
- 4. Return Procedure

## Package Contents

The following tables contains an overview of the package contents of the Product.

No.	Quantity	Description	Avonic SKU
1	1 pc	PTZ Camera	AV-CM70-NDI-W/B
2	1 pc	Remote Control	AV-CM40-RC
3	1 pc	USB cable type A to type A	AV-USB20-AA
4	1 pc	Power Supply 12V/A	AV-CM40-PSU
5	1 pc	RS-232 9-pin D-Sub female to DIN -8 male	AV-CM-RS-232
6	1 pc	5-way Phoenix Balanced audio conn. (CTBP92HE/5)	AV-PHNX-5
7	1 рс	2-way Phoenix RS-485 connector	AV-PHNX-2

Each item is visualized below and referenced by the associated number in the table above:



Figure 3: Package Contents

/!\

## Handling Precautions

Always take the camera by its base and do *not* move the position of the lens manually. See below.



Figure 4: Handling Precautions

## Unpacking the Camera



Execute the following steps to unpack the camera and associated components:

- **1.** Open the box.
- **2.** Verify that the contents of the box exactly matches the items as described in *Package Contents*. If this is NOT the case, contact Avonic and stop here.

The camera should be in its protective foam as follows:



#### Figure 5: Camera in Foam

- 3. Verify that the plastic camera bag is sealed. If this is NOT the case, contact Avonic and stop here.
- **4.** Break the seal of the sealed camera bag.
- 5. Take the camera out of the bag. Be sure to follow the *Handling Precautions* on page 13 while doing so.
- 6. Install the camera following the steps as described in the chapter *Mounting and Installation* on page 15

### **Return Procedure**

- If, for any reason, you have to return the camera to Avonic, Execute the following steps:
- 1. Place the camera back in its protective foam. Verify that the lens is in HORIZONTAL position!
- 2. Place the camera with *all* of its components in the box.
- 3. Verify that the contents of the box *exactly* matches the items as described in *Package Contents*.
- **4.** Contact *Avonic* for the Return Procedure.

## Mounting and Installation

This chapter describes the steps you have to perform to mount and install the Product in a correct and safe manner.

These steps are subdivided into the following groups, each of which is described in a separate section:

**1.** Mounting on Wall or Ceiling

∕

- 2. Connecting the Components to the Camera
- 3. Connecting a Controller to a Camera
- 4. Connecting the camera to a local network

Take the following precautions to prevent the Product from falling down which may cause injuries:

- Set up this Product on a hard, stable surface, or mount it to a wall or ceiling.
- ONLY use an Avonic mount for mounting to a wall or ceiling.
- Ensure the mounting construction is capable of supporting four times the weight of the Product. (See 'General Specifications > Weight product' in the Product Datasheet for the exact weight.)
- Use a safety loop or drop protection that prevents the Product from falling if the mounting construction fails.
- During mounting and installation, NEVER install a Product above a person.
- Check the installation at least once a year. An improper mounting could cause the unit to fall off, resulting in personal injury.

## Mounting on Wall or Ceiling

The following accessories (AV-MT200 and AV-MT250) are separately available if the client wants to mount the camera to the wall or ceiling. Contact your Avonic reseller or local distributor for purchasing details.



Wall and Ceiling mount (AV-MT200) SKU white: AV-MT200-W SKU black: AV-MT200-B



**Ceiling mount (AV-MT250)** SKU white: AV-MT250-W SKU black: AV-MT250-B

Visit *www.avonic.com* to download instructions for mounting the camera to the wall or ceiling using the accessories AV-MT200 or AV-MT250.

## Connecting the Components to the Camera



Execute the following steps to connect the components to the camera:

1. Connect all provided components (see *Package Contents*) to the ports at the rear of the camera. The figure below shows the applicable ports.



**2.** If you have connected the power cable to the camera, set the power switch at the back of the camera to 'ON'. If you use a PoE Ethernet connection instead, ensure that the Power switch is always 'ON'.

After empowering the camera, it starts initializing by first rotating the Pan-Tilt to the maximum top right position and then to the center.

i

#### If position preset '0' has been stored, this is the position that will be called after initialization.

The current IR-channel setting and IP Address of the camera are displayed on the *OSD Menu*. From this point onwards, the user can start controlling the camera.

#### Balanced Audio Connection

To connect balanced audio to the camera, you need the following:

- Double Male XLR cable with the possibility to connect it to a 5 pins phoenix connector (CTBP92HE/5: see *package contents.*).
- Audio input device with multiple XLR input/ outputs, such as a mixer.
- PoE (CAT) cable for streaming. See below:

PoE (CAT) cable






Follow the instructions below to connect the audio cable to the phoenix and the XLR connectors.

- 1. Connect the wires of the audio cable as is shown in picture 1 to both XLR connectors. Note that the pictures of the connector's back are **mirrored!**
- 2. Connect the wires of the other side of the audio cable as is shown in picture 2.

Take note that the colors of the wires could be different in your audio cable according to the pictures (XLR and Phoenix connector) below. You need to know which one are the right and left channels and which one is the GND (ground).

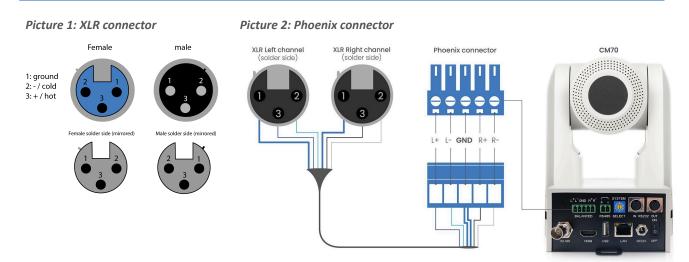

## Connecting a Controller to a Camera

You can connect one or more cameras to an VISCA IP controller.

See *https://avonic.com/en/product-categorie/controllers/* for an overview of the available controllers.

A controller gives you direct control over the most important camera settings (e.g., Pan, Tilt, Zoom, Focus, White Balance). You can access all other settings through the *OSD Menu* of the camera using the controller.

#### Connecting via USB, HDMI or SDI

Execute the following steps to connect the camera to a desktop or a (computer) monitor via USB, HDMI or SDI:

- **1.** Connect the camera to the desktop or monitor via the USB, HDMI or SDI port (see figure above).
- 2. Open the Windows Camera app or a third-party camera app.
- 3. Open the Settings.

/!\

i.

- **4.** Select the camera you just connected, or click on the option / icon to change the camera to the camera you just connected.
- 5. Press the *MENU* button on the provided IR Remote Control to open the *OSD Menu*.



## Serial Connecting via RS-232 or RS-485

#### **COM Port Settings**

In default working mode, the camera can connect to a VISCA controller via an RS-232 or RS-485 serial interface. The applicable COM port settings are (where '\*' stands for 'Default value'):

#### RS-232

- Baud rate: 2400/4800/9600\*/115200
- Start bit: 1 bit
- Data bit: 8 bits
- Stop bit: 1 bit

#### RS-485 (half-duplex mode)

- Baud rate: 2400/4800/9600\*
- Start bit: 1 bit
- Data bit: 8 bits
- Stop bit: 1 bit

See Appendix A - VISCA Settings and Command List on page 61 for the command list.

#### **RS-232** Interface



Ľ

Connect the controller to the back of the camera via the RS-232 cables as shown in the figures below:




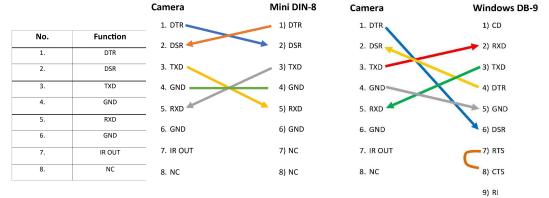


Figure 7: RS-232 Interface (Mini DIN-8)



#### **RS-232 Network Connection**

Execute the following steps to connect the controller to the back of the camera(s) via RS-232:

- 1. Make the connection using *daisy chaining* network architecture.
- 2. Keep in mind that the maximum cable length for RS-232 is 10-15m.




Figure 9: RS-232 Network Connection Diagram



#### **RS-485** Interface

Connect the controller to the + and - at the back of the camera via the RS-485 cables, as shown in the figure below. Note that the color of the connecting cables (red and black in the figure) may vary.

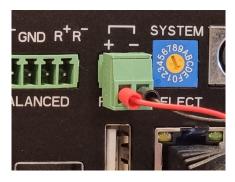


Figure 10: RS-485 Interface

**RS-485 Network Connection** 

10

Execute the following steps to connect multiple cameras to RS-485:

- 1. Attach the cameras to a 2-wire twisted pair bus (maximum length 1200m) that is terminated at both ends with a  $120\Omega$ -impedance resistor.
- **2.** Ensure that the maximum distance from the bus t of the camera or controller is 5m. If you use only ONE camera, the impedance resistor is not needed.

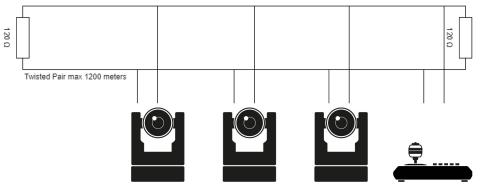


Figure 11: RS-485 Network Connection Diagram

#### Connecting via NDI® | HX/ LAN

The NDI®| HX connection allows you to connect and control your Avonic NDI®| HX camera through compatible hardware or software on your local network (LAN). Once the camera is installed on the local network (LAN) it is possible to use the NDI®| HX connection.

For installation use, downloading and installing the NewTek NDI Tools pack will provide a useful array of practical tools and utilities. The pack can be downloaded at *https://www.newtek.com/ndi/applications/* 

#### Settings

By default, the IP address of the camera is "192.168.5.163" with "admin" for both the username and password.

The control parameters for the CM7x-IP cameras are as follows:

- IP Address: 192.168.5.163
- Username: admin
- Password: admin
- TCP or UDP port: 1259

#### IP (Network) Connection

La

Execute the following steps an Avonic PoE camera to a LAN:

- **1.** Use a standard (PoE) switch. If the unit is simultaneously connected to both PoE and its own power supply, the power supply will take priority. If the power supply is disconnected when PoE is present, the camera will remain operational without interruption.
- **2.** Ensure that addressing is done via IP. When using VISCA over IP, the 'x' in all the '8x' addresses is always '1', where the Visca address in a Visca over IP environment is always 1. (See *Appendix A VISCA Settings and Command List* for more information.)

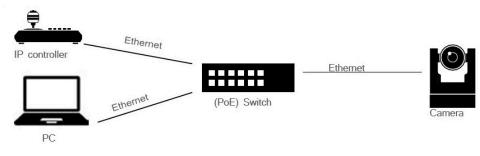


Figure 12: IP Network Connection Diagram



## Operation

- 1. WebGUI
- 2. Using the Remote Control
- 3. Other Key Combinations
- 4. OSD Menu
- 5. Using the Select Switch

## WebGUI

You can access the REC200 through a WebGUI where you can set up the REC200.

Login

B

i



#### Figure 13: WebGUI > Login

Execute the following steps to log on to the WebGUI:


- 1. Open your web browser. Enter the default IP address "192.168.5.163". The Login screen appears.
- 2. Enter "admin" for both the User Name and Password and Click LOGIN to continue.

If **DHCP** is enabled and no **DHCP** server is available, the camera will automatically appoint an IPv4 linklocal address between **169.254.0.0** and **169.254.255.255**. The IP address is shown on the screen at start-up.

After a successful logon, the WebGUI is displayed. Here, you can select various tabs that are described below.

#### LOCAL

In this tab, you can see a preview of the camera IP video output. For example:

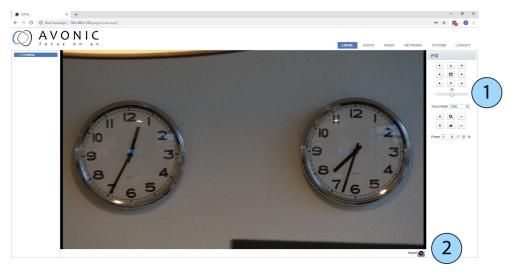

*Figure 14: WebGUI > Preview* 

Execute the following steps to see a preview of the camera IP video output:

- **1.** Use the options on the right to adjust the PTZ control, speed by zoom slider, focus and zoom functionalities.
- 2. Click on the camera icon below the screen to switch the preview between main stream and sub stream.

The Preview feature ONLY works if the main or sub stream is set to 'H264' (see VIDEO - Camera Settings).

#### AUDIO

⚠

L-

i

Connect first an audio cable with XLR connectors to the 5 pins Phoenix connector and connect the cable to the camera. See *Balanced Audio Connection* on page 16

010	Audio			
	Enable			
	Encode Type	MP3	\$	
	Sample Rate	44100	\$	
	Sample Bits	16	\$	
	Bit Rate	64Kbps	\$	
	Channel	Mono	\$	
	Input Volume	< ()	5 2	2
	Audio Delay(ms	0	(	D
		SAVE		
		SAVE		






Make your settings as follows:

- 1. Enable (checked) or disable (blank) embedding of audio input (camera rear).
- 2. Select the encoding type: mp3, AAC or G.711A.
- **3.** Select the sample rate: 16000, 32000, 44100 or 48000.
- 4. Set the sample bits always to 16.
- 5. Select the Bitrate: 32, 48. 64, 96 or 128 Kbps.
- 6. Select the Channel: Mono or Stereo.
- **7.** Set the Input Volume:  $1 \sim 10$ .
- **8.** Set the Audio Delay (ms): 0 ~ 200.
- 9. Click SAVE to apply your settings. A small confirmation dialogue appears in the bottom right corner.

Make sure to **enable audio** and to click at the **audio** button on the bottom of the *Preview page* of the WebGUI.



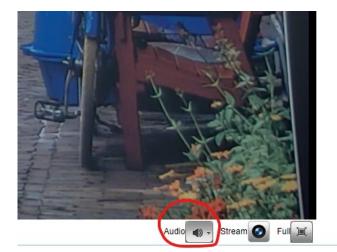

#### VIDEO

You can use the VIDEO tabs (described below) to define your settings for the video output, including the main settings of the camera's OSD.

#### VIDEO - Video Encoder

## 

Video Encoder	Video Encoder				
Streaming Video	Stream	Main Stream		Sub Stream	
<ul> <li>Multicast Streaming</li> <li>Camera Settings</li> </ul>	Compressed Format	H.264	\$	H.264	\$
OSD Output Format SRT	Profile Image Size Rate Control Image Quality Bit Rate(Kb/S) Frame Rate(F/S) I Frame Interval	BP 1920*1080 CBR Best 4096 60 300	<ul> <li></li> &lt;</ul>	HP 320*180 CBR Good 512 25 75	<ul> <li></li> <li></li> <li></li> <li></li> </ul>
	I Frame Min QP QFactor Stream Name	30 50 live/av0 SAVE		20 40 live/av1	
	RTP Package RTP Package Size	Small Package	\$		

Figure 16: WebGUI > VIDEO > Video Encoder



The Video Encoder settings are listed below.

Video Encoder Option	Main Stream	Sub Stream	
Compressed Format	MJPEG/ H.264/ H265	MJPEG/ H.264/ H265	
Profile	BP/ MP/HP	BP/ MP/HP	
Image Size	1920*1080/1280*720	1920*1080/1280*720/ 320*180/ 320*240/ 640*360	
Rate Control	CBR (constant bit rate) / VBR (variable bit rate) depending on format		
Image quality	Fixed at 'best'	Fixed at 'good'	
Bit Rate(Kb/s)	64-40960	64-40960	
Frame Rate (F/s)	5-60 frames per second	5-30 frames per second	
I FrameInterval	1-300	1-150	
I Framemin. QP	10-51	10-51	
Streamname	live/av0	live/av1	
RTSP Link	rtsp:// <ip-address>/live/av0</ip-address>	rtsp:// <ip-address>/live/av1</ip-address>	
RTP Package	Small Package (standard MTU size, 1500 bytes) Big Package (approx. 60kb MTU size)		

NDI uses the Main Stream of the camera. Execute the following steps to save your settings:

- 1. Click **SAVE** to apply your settings. A small confirmation dialogue appears in the bottom right corner.
- **2.** Reboot the camera if you changed RTP package.

Read this *article* from Youtube and the *article* from Facebook for setting up a correct stream, if you want to stream via Youtube or Facebook.

#### VIDEO - Streaming Video

LP)

i

Video Encoder	Streaming Video		
Streaming Video	Stream	Main Stream	Sub Stream
Multicast Streaming	Enable		
Camera Settings	Protocol Type	RTMP 💠	RTMP \$
▷ OSD	r totocor type	•	
Output Format	Host Address	192.168.5.11	192.168.5.11
▷ SRT	Host Port	1935	1935
	Stream Name	live/av0	live/av1
	User Name		
	Password		
	Password for stream encryption		
	Crypto key length in bytes	0 \$	0
	1	SAVE	

Figure 17: WebGUI > VIDEO > Streaming Video



The recommended Streaming Video settings are listed below.

Stream Option	Main Stream	Sub Stream
Enable	Mark checkbox to enable	Mark checkbox to enable
Protocol Type	RTMP, SRT	RTMP, SRT
Host Address	192.168.5.11	192.168.5.11
Host Port	1935	1935
Stream Name	live/av0	live/av1
User Name	Empty is default setting	Empty is default setting
Password	Empty is default setting	Empty is default setting
Password for stream encryption*	Empty is default setting	Empty is default setting
Crypto Key Length in bytes	0, 16, 24, 32	0, 16, 24, 32



ĽÒ

Execute the following steps to save your settings:

- 1. (\* in the table ) Enter a value for Password for stream encryption if the selected Protocol Type is "SRT".
- 2. Click SAVE to apply your settings. A small confirmation dialogue appears in the bottom right corner.
- **3.** Start an video streaming application like VLC mediaplayer, Daum Potplayer etc. to stream the video of the camera to that application.

#### VIDEO - Multicast Streaming

Video Encoder	Multicast stre	aming	
Streaming Video	Stream	Main Stream	Sub Stream
Multicast Streaming	Enable		
Camera Settings	Protocol Type	RTP Multicast	RTP Multicast
<ul> <li>OSD</li> <li>Output Format</li> </ul>	Address	224.1.2.3	224.1.2.3
▷ SRT	Port	4000	4002
	Access Method	rtp://224.1.2.3:4000	rtp://224.1.2.3:4002
		SAVE	

#### Figure 18: WebGUI > VIDEO > Multicast Streaming

The recommended Multicast Streaming settings are listed below.

Stream Option	Main Stream	Sub Stream			
Enable	Mark checkbox to enable/ disable	Mark checkbox to enable/ disable			
Protocol Type	RTP/ TS Multicast/ TS Unicast	RTP/ TS Multicast/ TS Unicast			
Address (multicast)	224.0.0.0~ 239.255.255.255	224.0.0.0~ 239.255.255.255			
Address (unicast)	Specify the IP address to which you want the Unicast stream pushed.				
Port	4000 (default)	4002 (default)			
Access Method	rtp://224.1.2.3:4000	rtp://224.1.2.3:4002			

Click **SAVE** to apply your settings. A small confirmation dialogue appears in the bottom right corner.



#### VIDEO - Camera Settings



#### Figure 19: WebGUI > VIDEO > Camera Settings

Execute the following steps to define your camera settings:

- 1. Use the **Camera Settings** tabs (described below) to change the OSD settings as if you are using the remote control.
- 2. If you have changed a value with the remote control, update the WebGUI using the **REFRESH** button.

A picture is shown **ONLY** if the main video stream is set to H264.

#### Focus

i

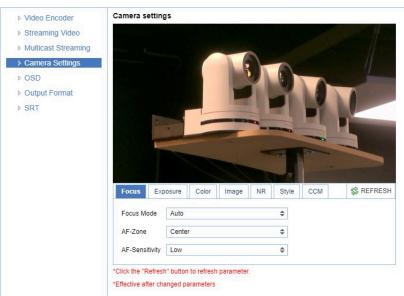


Figure 20: WebGUI > VIDEO > Camera Settings > Focus



The three Focus settings are explained below.

# Focus ModeAutoThe camera determines the focus position by itself and will adjust to the contents of the<br/>filmed object.ManualThe user is able to set a fixed focus position manually. This can be useful when the<br/>contents of the filmed object are not clear towards the background and the autofocus has<br/>difficulty finding the correct focusing.One-pushThe camera will focus once and will keep the focus in that position until another focus<br/>command is sent.

#### AF-Zone

This setting defines the area where the autofocus is aimed at.

#### **AF-sensitivity**

Sets the level of speed with which the autofocus responds. This can be useful if you have people walking through the picture. If the setting is 'High', the camera will respond immediately. If the setting is 'Low' or 'Medium', the camera will not react to sudden and short changes in the picture.

Note that in some cases the autofocus will have some difficulties to focus. We strongly recommend to focus manually to avoid autofocus issues. See also the Troubleshooting/ Image in this manual.

#### Exposure

If you click in the field after the option 'mode', you will see that you have the following Exposure options: Auto, Manual, SAE, AAE and Bright. These options are described below.

#### Auto Exposure Mode

In Automatic exposure mode, the camera determines the iris and shutter settings. See the settings below:

#### EV (Exposure Value): ON/OFF and Level

If the light conditions require this, you can create a quick adjustment to your current exposure settings without actually changing the fundamental values like iris and shutter.

#### i

i.

Take care to not 'overdo' the settings or the picture will become washed out bright or too dark.

#### BLC (Back Light Compensation): ON/OFF

Compensation for having to film against bright light directly into the lens. See the pictures below:



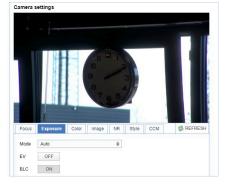


Figure 21: Camera Settings > Auto Expo (BLC OFF)

Figure 22: Camera Settings > Auto Expo (BLC ON)

#### Flicker

This setting handles the flickering of artificial lighting in its operating space. Options are 50Hz, 60Hz and OFF.



#### **G.Limit**

Gain limit is the maximum level of artificial brightness and contrast that the camera can automatically add to the image. This setting will make a significant difference to the overall picture.

1

Within reason this setting add noise to the picture in dark areas and produce a washed out, greyish picture.

#### DRC

Dynamic Range Compression has a similar effect on the picture as the above mentioned gain limit. The DRC works by compressing the natural dynamic range of the image by taking out the darkest and lightest parts. This can be a particular helpful setting when the light conditions are challenging. The differences should be clearly visible in dark parts of the image, as they will become lighter/more grey as the level of DRC increases.

#### Manual Exposure Mode

Focus	Exposure	Color	Image	NR	Style	CCM	S REFRESH
Mode	Manual			\$			
Shutter	1/100 \$						
Iris	F1.8			\$			
DRC	7			\$			

#### Figure 23: WebGUI > VIDEO > Camera Settings > Manual Exposure Mode

In Manual exposure mode, you can manually set the shutter, Iris and DRC options.

#### Shutter

The shutter setting determines the amount of time per second that the sensor is exposed. The range of the shutter speed setting is 1/25th of a second (40 milliseconds) to 1/10000th of a second (0.1 milliseconds). If you shoot a video with a shutter time of 1/25th of a second, you can imagine that the video becomes blurry and overexposed. The faster the shutter is set to open and close, the sharper your filmed object will become. However, the amount of light that falls onto the sensor is also diminished.

If you are inexperienced or if the light conditions change a lot, it's best practice to keep the camera on the automatic exposure setting.

#### Iris

i.

The Iris is a part of a lens that regulates the amount of light that passes through the lens and onto the sensor, by altering the diameter of the hole through which the light enters. The diameter of the hole is measured in *F*-*stop* value. A higher value lets in less light, while a lower setting lets in more light.

This setting affects the length of the depth of field. The higher F-stop you use, the deeper your depth of field. Reason: the smaller the aperture, the more focused the light beams will be, resulting in a more focused image.

#### DRC

Dynamic Range Compression has a similar effect on the picture as the above mentioned gain limit. The DRC works by compressing the natural dynamic range of the image by taking out the darkest and lightest parts. This can be a particular helpful setting when the light conditions are challenging. The differences should be clearly visible in dark parts of the image, as they will become lighter/more grey as the level of DRC increases.

#### SAE Mode (Shutter Auto Exposure)

In this mode, the shutter speed is user-adjustable. The camera automatically decides the best Iris F-stop value for an optimal exposure setting.

Keep in mind that the shutter speed is the amount of time that each frame of the sensor has been exposed to light.



To compensate for poor lighting conditions, it is possible to adjust the *DRC (Dynamic Range Compression)*. The DRC works by compressing the natural dynamic range of the image, by taking out the darkest and lightest parts. This can be a particular helpful setting when the light conditions are challenging. The differences should be clearly visible in dark parts, as they will become lighter / more grey as the level of DRC increases.

#### AAE Mode (Aperture Auto Exposure)

The camera will automatically set the shutter speed based on the Iris F-stop value (aperture) set by the user. As the camera determines the preferable shutter speed, it is possible to turn the anti flicker setting to the required 50Hz or 60Hz to eliminate the effects of a shutter functioning at 1/50th of a second, for example. In this mode, both the Gain limit and DRC are available to compensate for challenging light conditions.

#### **Bright Mode**

This mode is to try and create a decent image when the light conditions are exceptionally poor.

Mode	Bright			\$			
Bright	-0				6		
Flicker	50Hz 🗘						
G.Limit	$\bigcirc$				4		
DRC	7			¢			

#### Figure 24: WebGUI > VIDEO > Camera Settings > Bright Exposure Mode

In this mode, you should keep the Bright level, Gain limit and DRC as low as possibly acceptable to avoid getting too much noise in the picture. If the level of noise in the image becomes unacceptable, you can use noise reduction to smooth the picture over.

#### Color

The color modes inside the camera are designed in such a way that the video output of the camera can match the current light conditions to produce accurate colors. There are several automatic preset modes and a manual mode to set the colors to the preference of the user.

Camera setting:	5				
			2		
13 6-1	11	1	and a state		-
		4			
1	-		ONIC	Style	REFRESH
Fanna Funa					
Focus Expo		Image	INIX		MEI NEON
WB Mode	Auto	image	NR	\$	(a) HEI HEOH
WB Mode RG Tuning			INIX	¢ 0	a nei neon
WB Mode RG Tuning BG Tuning	Auto		INK		
WB Mode RG Tuning			INIX	¢ 0	

Figure 25: WebGUI > VIDEO > Camera Settings > Color



#### The settings are listed below.

WB mode auto	The camera continuously measures and defines the light conditions and acts accordingly. In this mode, there are some adjustments that can be made to tune the image to the preference of the user.
RG Tuning	Red Gain Tuning, increase or decrease red.
BG Tuning	Blue Gain Tuning, increase or decrease blue.
Saturation	How saturated the image's colors are. 0% would produce a black and white image.
Hue or tint	The balance between green and red. 0 is green, 14 is red.
AWB Sensitivity	This setting indicates how quickly the camera responds to changing light settings.

#### Image

Bright		0	6	
Contrast	<u> </u>	0	8	
Sharpness		0	 ⊃ 6	
Gamma	0.45		\$	
DCI	OFF		\$	
B&W Mode	Color			
Flip-H	OFF			
Flip-V	OFF			
Auto Flip	OFF			
Low-Light Mode	OFF			

#### Figure 26: WebGUI > VIDEO > Camera Settings > Image

These are settings that have an effect on the image post-processing. Basically, these settings are all artificial: they don't affect the optical parts of the camera itself.

The settings are listed below.

Bright	The amount of detail that is visible in darker areas of the image. Be careful not to set this setting too high, as you will see that the image becomes 'milky-white'.
Contrast	The amount of detail that is visible in lighter areas of the image.
Sharpness	Artificial contrast, be careful no to set this too high as it will create a sort of 'halo' around sharp edges of filmed objects. The setting of sharpness coincides with the setting of noise reduction.
Gamma	The gamma curve selection has to do with the perception of the human eye to lighter and darker. If you select a higher rate of gamma, you will see that the picture become darker, but you get also more detail.
DCI	The Dynamic Contrast affects the contrast of the picture. The higher the number, the more contrast you will get.
B&W Mode	Black and White Mode makes the picture black and white.
Flip-H, Flip-V, Auto flip	The Flip-H mode turns the picture horizontally, while the Flip-V mode turns it vertically by 180 degrees. When Auto Flip is on, the camera will automatically flip the picture horizontal and vertical.
Low-Light Mode	The Low-Light mode is present to be able to film when the environment in which the camera sits is almost completely dark. The frame rate will drop to 10 frames per second, to catch as much light on the sensor as possible. If this mode is needed to produce a picture, add more light to the scene to get better results.

#### **NR (Noise Reduction)**

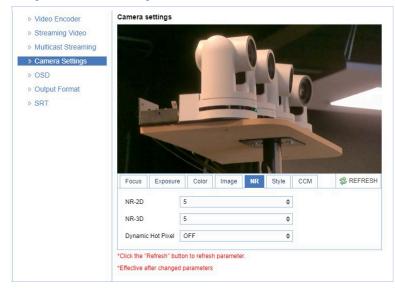


Figure 27: WebGUI > VIDEO > Camera Settings > NR

Noise reduction can be used to soften the image when noise is present due to poor lighting conditions. The higher the amount of noise reduction, the softer the image will get, ultimately resulting in loss of details. Be careful when adjusting the noise reduction, as it can take away the natural `crispness' of the image. You will lose the natural 'crispness' of the image, if you set the dynamic contrast and gain too high (this will cause more noise). Better practice is to add light to the filmed object.

The settings are as follows:

NR-2D	Used for still-standing objects.
NR-3D	Used for moving objects.
Dynamic Hot Pixel	A dynamic hot pixel is a defective pixel which look much brighter than they should and will sometimes become visible due to long exposure shots of the camera at a higher rate of light sensitivity. This is often visible as sparkles in the picture. The Dynamic Hot Pixels mode corrects the pixel so that the pixel will appear as normal on the filmed picture.

Style

Focus	Exposure C	NR	Style	CCM	SREFRESH	
Style	Clarity		¢			
Click the	Default					
Effective	Normal					
	Clarity					
	Bright					
	Soft					

Figure 28: WebGUI > VIDEO > Camera Settings > Style

Here, you can choose the style you want, such as **Default** (standard setting), **Normal** (which makes the picture more 'natural'), **Clarity** (makes the picture more clear), **Bright** (which makes the picture more bright) and **Soft** (which softens the picture).



#### **CCM (Customizable Color Matrix)**

If you have purchased the additional license for SRT and the Customizable Color Matrix (CCM), the Camera Settings menu will have an extra tab in the camera settings: CCM. With this feature you can match the colors from the Avonic CM70 series cameras with cameras from other manufacturers. The colormatrix is a 3x3 "table" that affects red, green and blue in the filmed picture and their relation to it.

#### 1. Open Video > Camera Settings > CCM

- 2. Click on *Enable CCM* to enable this feature. You will see the default setting with a natural picture.
- 3. Read the paragraphs below first before you are changing these numbers!

amera setti	- 10							
	14	ier.		ent			1	140
		A						
	27-4		비					
Focus E	xposure	Color	Image	NR S	Style	CCM	RI	EFRESH
Focus E Enable CCM		Color	Image	NR 5	Style	ссм	S RI	EFRESH
		Color	Image	NR	style B		S RI	EFRESH
				NR 3				FRESH
Enable CCM		R	G		в	C 256		EFRESH


#### **Channels and Signals**

The color matrix becomes visible when the CCM feature is enabled. It has a vertical and a horizontal Red, Green, Blue (RGB) row. By filling these with numbers it is possible to change the colors in the picture.

#### Note the following:

Ľ

- **1. Channel:** Horizontal RGB **row**. This *corresponds* with red, green and blue parts in the picture, but changes also secondary colors, because these colors are having some red, green and blue in them.
- 2. Signals: Vertical RGB column. This subtracts or adds red, green, blue from or to the filmed picture.
- **3. CCM column:** The sum of Red + Green + Blue (signals). The cell turns red if the number is not 256. You can ignore that since the colors will be changed, even if the number is not exactly 256.

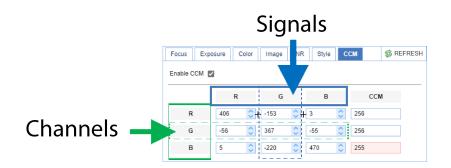

#### Matching and finetuning colors

Matching and finetuning colors is not so simple as it looks. That is because changing colors in a camera works different if you compare it with painting. It is important that you realize that the cells from the sensor (photovoltaic cells) do not carry any color information, only **luminance** information. In other words: the cells will make colors in the picture **more brighten or darker** in such a way that the balance between the colors shifts.

You need to know also that the processor in the camera, for example, makes everything in the red parts red. That does not means that everything in the red parts IS actually red! Even if there are a few pixels green or blue, the sensor will see it and will make them red as well. That is why colors can look different in a camera, then when you are painting.

i

i

- 1. There is no database or any tutorial that can help to match colors between specific camera systems of different manufacturers. Every camera system works different and so the color matrix does. Changing a number in a cell, for example, in 256 in the matrix of the CM70 series camera, does not mean that this will change in exactly the same color in the picture from an another camera.
- **2.** Practice a lot to learn for yourself what the best settings are to match the colors between the CM70 series camera and a camera from an another manufacturer.
- **3.** Read the paragraphs below about channels and signals, subtracting and adding colors to learn how the matrix works.

#### Subtracting colors

You can subtract colors using numbers **above or below** zero in the **same cell** or in a cell of the **same row**.

For example:

- If you change the number in the green channel > Red signal in a number **above zero**, it means that you are subtracting the red signal from the green channel, making green parts purple, because the camera sensor removes red into the green parts of the picture. Red and yellow parts become more green, as the red signal is decreased leaving a green tint behind. I you have a sharp eye, you can see that other colors in the picture become slightly lighter. By changing the same number in a number **below zero**, you have the same result, but other colors in the picture become slightly darker.
- 2. If the number in the Green channel > Green Signal is changed with the same amount as in the Green channel > Red signal, green is subtracted from the picture, removing the greenish tint from the yellow and red parts. This makes the colors as they where before, but less intense and darker (because **light** is removed and not color).


#### Remember that:

- +256 in G-R = Red signal is subtracted from the green channel, changing the balance between green and red towards green. This means that red pixels in the picture will turn slightly into green and since there a lot of red pixels are in red and yellow parts, a greenish tint is "left behind" in the picture.
   +256 in G-G = Green is subtracted from the green channel, changing the balance between red and green as it was by removing the greenish tint from the picture. Since light is removed from the picture, colors become less intense and darker.
- 2. +256 in a cell makes the overall picture slightly lighter, while -256 in a cell makes the overall picture slightly darker.
- **3. Subtracting** a color from the picture affects the colors from the whole picture, because there are also pixels from that color in other colors in the picture even if you cannot see them. See the pictures below:

Red and yellow parts green. left: +256, right: -256





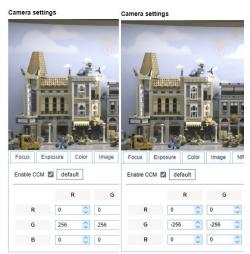



#### **Adding colors**

You can add colors by changing the balance between the red, green and blue signals. A color will be added if a number above zero is used in one cell and a number below zero is used in another cell of the same channel, or if the cells of different signals and channels are filled with a number.

For example:

i

- By changing the number in the Blue channel > Red signal to a number above zero and in the Blue channel > Blue signal in a number below zero, you can add blue to the picture, resulting in purple in red and yellow parts en green in blue parts.
- 2. By doing the opposite, changing the number in the Blue channel > Red signal to a number below zero and in the Blue signal > Blue channel to a number above zero, you can add red to the picture. However, since zero in a cell is not nothing, the color green will be added too in this case! This means that red parts in the picture will not become (blood) red, but orange and yellow parts become more saturated. Also the difference between the number above zero and below zero will play a role. The greater the difference between the two numbers, the more color is added and the more saturated the picture will become.
- **1.** Adding colors is possible by using a number *above* and *below* zero in the same channel (row).
- **2.** The bigger the difference between the numbers *above* zero and *below* zero, the more color is added to the picture and the more saturated the picture become.
- **3.** The colors that will be shown in the picture, depends on the *balance* between red, green and blue signals.



-512 red and +512 blue

Camera settings



from the picture



Video Encoder	OSD
Streamimg Video	CAMERA-1
Multicast streaming	
Camera settings	
OSD	
Output format	01/01/1970-00;16:03
	Show Time  OSD Offset  Title  Time
	Show Title
	Time Font Color White
	Title Font Color White
	SAVE
	OSD Font Size
	According to the resolution
	Scale size automatically
	Master Stream OSD Font Size 48
	Slave Stream OSD Font Size 48

#### Figure 29: WebGUI > VIDEO > OSD

VIDEO - OSD

In this area, you can put a camera name and time as overlay on the IP stream (the overlay feature is exclusively available on the IP stream, not on other outputs).

F

#### Note that only the output of the camera will be shown with the main stream set to H264.

#### Fields

You can enable or disable *Show Time* and *Show Title* can be enabled or disabled by marking or unmarking the checkbox next to the respective setting (the time and name settings can be found under the tab **SYSTEM**, sections **Attributes** and **Time**).

You can use the dropdown menus *Time Font Color* and *Title Font Color* to set the desired font colors. You can use the directional arrows on the right to move the title and time to the preferred position on the screen.

#### **OSD Font Size (related to Camera Name and Time)**

You can use *Scale size automatically* for both main stream and sub stream. If checked, the camera name and time overlay will always scale with the image, keeping the proportions intact.



Click **SAVE** to apply your settings. A small confirmation dialogue appears in the bottom right corner.

Video Encoder	Output format		
Streamimg Video	Video Out Format	1080P60	\$
Multicast streaming		1080P60	
Camera settings		1080P50	
OSD		1080P30	
• Output format		1080P25	
		1080160	
		1080150	
		720P60	
		720P50	
		720P30	
		720P25	
		1080P59.94	
		1080159.94	
		1080P29.97	
		720P59.94	
		720P29.97	

#### **VIDEO - Output Format**

#### *Figure 30: WebGUI > VIDEO > Output Format*

This setting is related to the output resolution and frame rate on the HDMI and SDI connectors. Use the WebGUI to set the resolution of the main and sub IP streams. The resolution of the USB output is determined by the computer that is connected to it.



Click **SAVE** (not shown here) to apply your settings. A small confirmation dialogue appears in the bottom right corner.

A

Video output over IP cannot be a higher resolution than the physical SDI/HDMI output setting.

### **VIDEO - SRT**

These settings are related to the SRT streaming protocol. You can define the port, passkey and encryption bit.

```
F
```

When not using Encryption, please make sure to set the Crypto key length to 0.

SRT Listener Mode and Caller Mode are both supported. You define the Listener mode settings here, whereas you define the Caller Mode settings in the *Streaming Video tab*.

See the respective figures below for the Listener and Caller Mode Settings, respectively.



Figure 31: WebGUI > VIDEO > SRT (Listener Mode)

Video Encoder Streaming Video	Streaming Video	Main Stream
Multicast Streaming	Enable	
Camera Settings OSD	Protocol Type	SRT
Output Format	Host Address	192.168.5.11
SRT	Host Port	1935
	Stream Name	live/av0
	User Name	
	Password	(j
	Password for stream encryption	
	Crypto key length in bytes	0

Figure 32: WebGUI > VIDEO > Streaming Video (Caller Mode)



### **NETWORK**

Use the tabs on the NETWORK screen to define the appropriate **Port**, **Ethernet** and **DNS** settings.

#### Port Settings

La

Port Settings	Port Settings	
Ethernet	Port Data	3000
DNS	Port Web	80
	Port Onvif	2000
	Port Soap	1936
	Port RTMP	1935
	Port Rtsp	554
	Port Visca	1259
	Port WebSocket	8088

#### Figure 33: WebGUI > NETWORK > Port Settings

You can define specific ports for the different streaming outputs and protocols the camera supports.

⚠

P

Make sure these settings don't interfere with other uses and services on the same network.

Click **SAVE** to apply your settings. A small confirmation dialogue appears in the bottom right corner.

#### **NETWORK - Ethernet**

In this section, you can specify the IP settings for the Ethernet adapter.

Port Settings	Ethernet	
Ethernet	DHCP	
DNS	IP Address	192.168.5.163
	Subnet Mask	255.255.255.0
	Default Gateway	<b>1</b> 92.168.178.1
	MAC Address	98:14:D2:21:12:3F
		SAVE

#### Figure 34: WebGUI > NETWORK > Ethernet



Execute the following steps to save your settings:

1. Click **SAVE** to apply your settings. A small confirmation dialogue appears in the bottom right corner.

**2.** Reboot the camera.

#### NETWORK - DNS Here, you can specify the **Preferred** and **Alternative DNS Server**.

▷ Port Settings	DNS		
Ethernet	Preferred DNS Server	0.0.0.0	
▶ DNS	Alternative DNS Server	0.0.0.0	
		SAVE	

Figure 35: WebGUI > NETWORK > DNS

Click **SAVE** to apply your settings. A small confirmation dialogue appears in the bottom right corner.

#### NDI® | HX Settings

L-

This part of the network concerns the NDI®| HX functionality of your Avonic NDI®| HX camera.

	NDI	AV-CM70-NDI-W
Port Settings	NDI	
Ethernet	NDI Enable	
DNS	NDI Name	Avonic-CM70
NDI	NDI Group	public

NDI Enable checkmark box turns the NDI® | HX capability ON or OFF

**NDI Name** is the name with which the camera presents itself to other NDI®| HX hardware or software on the local Network (LAN). This is useful for easy camera recognition


**NDI Group** sometimes you want to limit visibility of NDI camera to specific systems. Or may need access to NDI cameras from another subnet. The NDI Access Manager lets you assign sources to groups, and choose which of these various systems receive. This setting sets up to which group this camera must belong.



### **SYSTEM**

You can use the **SYSTEM** tabs (described below) to define the desired system settings.

License

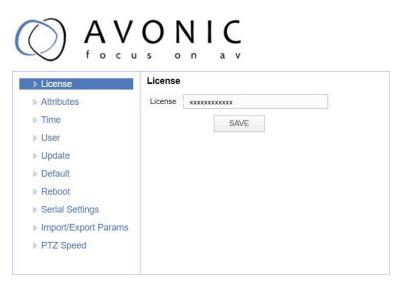

#### Figure 36: WebGUI > SYSTEM > License

If you have purchased the license for the premium features of this camera, you can enter the License key here to unlock these features. *Reboot is not required as the license is instantly activated.* 

i

You can acquire a license through your local sales channel or directly at Avonic.

Execute the following steps to enter your license key:

- **1.** Enter your license key in the *License* field.
- 2. Click SAVE to apply your settings. A small confirmation dialogue appears in the bottom right corner

#### Attributes

Time	Device Name	CAMERA-1	
User	Device ID	1	
Update	Language	English	+
Default			
Reboot		SAVE	

#### Figure 37: WebGUI > SYSTEM > Attributes

Specifying a specific device name to be displayed in the OSD can be useful when using multiple cameras on the same LAN. The Device-ID is always 1 (addressing is done via IP). The language cannot be changed.



Click **SAVE** to apply your settings. A small confirmation dialogue appears in the bottom right corner.



-		
	Im	

Attributes	Time		
> Time	Date Format	MM-DD-YYYY	¢
> User	Date Sprtr	1	\$
> Update	Zone	(GMT+01:00)Berlin, Stockholm, Rom	\$
Default	Hour Type	24 Hours	\$
Reboot			•
	NTP Enable		
	Update Interval	1 day	\$
	Host Url	time.nist.gov	
	Host Port	123	
		SAVE	
	Time Settings		
	Time Settings	Synchronize with computer time	\$
	Computer Time	2019-02-21 14:10:47	
		SYNC.	

#### Figure 38: WebGUI > SYSTEM > Time

You can *manually* set the time and date, or synchronize the time and date via a computer or an external server on the LAN or WAN.

L-

Either click **SAVE** to apply your manual settings, or **SYNC** to synchronize the time and date.

Attributes	User		
Time	Authority	admin	\$
User	User Name	admin	
Update	Password		
Default			
Reboot	Confirm Password		
		SAVE	



You can define different users with specific permission levels and different username / passwords combinations. There are 2 levels of users: *administrators* with access to all features, and *user-1 and user-2* with access to the preview and PTZ controls.



Click **SAVE** to apply your settings. A small confirmation dialogue appears in the bottom right corner.



#### Update

License	Update	
Attributes	MCU Version	V2.5.0 2020-11-27
▶ Time	Camera Version	V2.5.6 2020-11-27
▷ User		
> Update	AF Version	V1.0.1 2020-11-26
▶ Default	Update File	Choose File No file chosen
▶ Reboot		UPGRAD
Serial Settings		
Import/Export Params		

Figure 40: WebGUI > SYSTEM > Update

By default, this screen shows a readout of the current firmware versions. The *Update file* provides a firmware upgrade functionality via this screen. When the camera is done uploading and processing the update, it will automatically reboot.



Execute the following steps to perform a firmware upgrade.

- 1. Click Choose File to select the firmware update file.
- 2. Click **UPGRADE** to start the firmware upgrade wizard.
- **3.** Follow the steps in the wizard.
- 4. Wait until the process finishes and reboots.
- 5. Refresh your browser and log in again after the reboot.

#### Default

If necessary, you can perform a factory reset. This restores all default settings.



Figure 41: WebGUI > SYSTEM > Default



Click on the button **This will restore the factory defaults** to perform a factory reset. When completed, the camera automatically reboots. The camera will be ready for use again after the boot cycle.

#### Reboot

If necessary, you can manually perform a camera reboot.



Figure 42: WebGUI > SYSTEM > Reboot



Click on the button **Reboot** to reboot the camera. It will be ready for use again after the boot cycle.

#### Serial Settings

License	Serial settings		
Attributes	Protocol Type	Auto	4
Time	Visca Address	1	4
User	Visca Address Fix		
Update			
Default	PELCO-P Address	1	4
Reboot	PELCO-D Address	1	+
Serial Settings	Baudrate	9600	4

#### Figure 43: WebGUI > SYSTEM > Serial Settings

You can choose the preferred protocol to use and the accompanying address to go with it. Or you can select the default protocol type 'Auto' to let the camera detect which protocol is being used. Note that *addressing* is still needed, even with the automatic setting.

Click **SAVE** to apply your settings. A small confirmation dialogue appears in the bottom right corner.


#### Import/Export Parameters

ĽÖ

License	Parameter import/export
Attributes	Import Params Choose File No file chosen
Time	Import Expo
User	
• Update	
Default	
Reboot	
Serial Settings	

#### Figure 44: WebGUI > SYSTEM > Import/Export

The CM7x cameras have the ability to import or export a configuration.



- **1.** Select the appropriate button to import or export your configuration parameters.
- **2.** Follow the steps in the wizard that appears.



The exported settings do NOT include any presets that are stored in the camera!

#### P/T/Z

/[\

License	P/T/Z		
Attributes	PTZ Speed	Slow	OHigh
▷ Time	Speed by zoom		
⊳ User	Image Freezing		
▷ Update			
▷ Default	Low Power Mode		
▶ Reboot	Zoom Speed	8	÷
Serial Settings	Preset Pan Speed	25	÷
▷ Import/Export Params	Preset Tilt Speed	21	\$
» P/T/Z	Preset Zoom Speed	8	\$
		SAVE	1
		SAVE	

#### Figure 45: WebGUI > SYSTEM > P/T/Z

In this window, you can define various P/T/Z settings for your camera. These are:

PTZ Speed	It is possible to increase the maximum pan and tilt speed, this can be useful in a conference system where quick action is necessary. The camera will produce slightly more noise when this setting is set to 'high'.
Speed by zoom	This mode affects PTZ speed when the camera is zoomed in to its max. If you move the stick of your controller when this mode is disabled, it will move too fast to control it. Enabling reduces this speed in relation to the current zoom factor.
Image Freezing *	You can freeze the image when the camera moves from one preset to another preset when you use your (remote) controller.
Low Power Mode:	The camera will go in stand by mode to reduce its power when this mode is enabled.
Note	In order to reduce the power the camera uses, the camera will shut down the IP Port. To activate the camera again, use a serial connection or the IR Remote to set off the Low Power Mode.
Zoom Speed	You can set the speed to which the camera will zoom in to the image. The higher the number, the faster the camera will zoom in. This works only when the remote controller is used to control the camera.
Preset Pan, Tilt and Zoom Speed	This mode affects the speed to which the camera is switching from one preset to another when you use your (remote) controller. The higher the number, the faster it will switch.

 $\triangle$ 

\* If you are using audio during streaming, put it first **OFF** before freezing the image! Freezing the image could produce a paused audio output on the IP Stream. This leads to (audio) stuttering. The video stutters when it is re-engaged, but this is rather easily solvable by putting the iFrame value at 4 or 5 times per second, that is quick enough to counteract the video stutter.

#### **MJPEG Snapshot**

The Avonic CM7x-IP cameras are equipped with a MJPEG snapshot feature to, for example, implement into third party software.



To access the MJPEG snapshot feature, use the following format: <a href="http://IP/img/capjpg/snapshot.jpg">http://IP/img/capjpg/snapshot.jpg</a>.

Every time the page is refreshed, the picture will be updated.



# Using the Remote Control

The Product is provided with an IR Remote Control for full control of the camera and use of the OSD menu.





The various options (a. through n.) are described below.

### a. Power



- 1. Press the **Power** button to turn on the camera. If the position preset '0' has been stored, this will be called after initialization.
- Press the Power button again to turn the camera off. It will turn to the back when turned off, this
  is called the "privacy mode".

### b. Set

This button has *no* function with this camera.



### c. Camera Select

Up to 4 different cameras can be controlled with one IR remote Control. You can use the **camera select** buttons [**1**,**2**,**3**,**4**] to select the IR channel that the remote control is using. The default camera IR channel is 1.

1. To control a camera on first use, select camera 1 (IR channel 1) on the remote control.

- **2.** To control a second camera, you first need to change the IR channel stored in the camera from 1 to 2. Then do the following:
  - **a.** First turn off the other cameras in the room you don't want to change, to prevent that other cameras also get changed accidentally.
  - **b.** Select camera 1 on the remote control, because the camera is still configured to listen to IR channel 1.
  - **c.** Press **[\*]**→**[#]**→**[F2]** to change the IR channel inside the camera to IR channel 2. The camera will confirm this on the screen.
  - d. Select camera 2 on the remote control to control this camera.

Key Combinations: (Default IR address is 1)

 $[*] \rightarrow [#] \rightarrow [F1]$ Camera Address No. 1 $[*] \rightarrow [#] \rightarrow [F2]$ Camera Address No. 2 $[*] \rightarrow [#] \rightarrow [F3]$ Camera Address No. 3 $[*] \rightarrow [#] \rightarrow [F4]$ Camera Address No. 4

The Function buttons F1, F2, F3 and F4 are the colored buttons on the remote.



Figure 47: Function Buttons on Remote

### d. Number Keys

The number keys are used to call presets.



ĽÖ)

Press the number **[0-9]** of the desired preset and the camera will respond accordingly (See 'h' on how to set & clear presets).

### e. Focus + -

**1.** Push the button [manual focus] first before using the focus buttons.

Focus the camera with the [+] and [-] button.
 If the camera does not respond, check if the camera is set to auto-focus.

### f. Auto/Manual Focus

Set the camera to 'auto focus' or 'manual focus'. If the camera is configured to 'auto focus', the buttons [Focus + -] are disabled. If the camera is in 'manual focus' and the *Zoom* buttons are used, the camera automatically switches to 'auto focus'.





### g. Zoom + -



Zoom the camera with these buttons.

## h. Set & Clear Preset

A preset is a specific position of a camera that you save in the camera. A preset is assigned to a number from 0-9.



**1.** To set a preset, first point the camera in a specific directing and a specific zoom position.

- 2. Assign the position to a number with the button Set Preset.
- 3. You can call the preset by pressing one of the numbers 0-9 on the remote control.

```
Set Preset: [SET PRESET]\rightarrow[<number>]
```

Call Preset: [<number>]

Clear Preset: [CLEAR PRESET] $\rightarrow$ [<number>]

If the position preset '0' has been stored, this position will be called after initialization.

Use ONLY presets between 0-9 when using the Remote Control. For presets 10 or higher you need a serial or IP connection!

## i. PTZ Keys (up/down/left/right)

Use these keys to move the camera in the desired direction.

### j. Home



L-

LA)

/!\

Use this key to set the direction of the camera to the center position.

### k. BLC ON/OFF

Use this key to enable / disable the Back Light Control feature.

### I. Menu



- **1.** Use the *Menu* button to open the *On Screen Display (OSD)* menu. This menu is visible on the HDMI/SDI/IP output.
- **2.** If the menu is not in English, press  $[*] \rightarrow [#] \rightarrow [4]$  to change the Menu language into English.

### m. Function Keys (F1/F2/F3/F4)

Used to configure the IR channel of the camera. See 'c. Camera Select' above for instructions.

### n. Blank Buttons

These buttons have NO function with this camera.



# Other Key Combinations

The following key combinations on the Remote Controller have specific functions. These are:

Combination	Function
<b>[*]</b> → <b>[#]</b> → <b>[4]</b>	Menu set to English
<b>[*]</b> → <b>[#]</b> → <b>[6]</b>	Restore factory defaults
<b>[*]</b> → <b>[#]</b> → <b>[9]</b>	Flip switch (just temporary flip to view the image flipped)
[*] → [#] → [Auto]	Enter into the aging mode, only for quality control purposes
$[*] \rightarrow [#] \rightarrow [Manual]$	Restore the default username, password, and IP address
<b>[#]</b> → <b>[#]</b> → <b>[#]</b>	Clear all presets
<b>[#]</b> → <b>[#]</b> → <b>[0]</b>	Switch the video format to1080p60*
$[\#] \rightarrow [\#] \rightarrow [1]$	Switch the video format to 1080p50*
<b>[#]</b> → <b>[#]</b> → <b>[2]</b>	Switch the video format to 1080i60*
<b>[#]</b> → <b>[#]</b> → <b>[3]</b>	Switch the video format to 1080i50*
<b>[#]</b> → <b>[#]</b> → <b>[4]</b>	Switch the video format to 720p60*
<b>[#]</b> → <b>[#]</b> → <b>[5]</b>	Switch the video format to 720p50*
<b>[#]</b> → <b>[#]</b> → <b>[6]</b>	Switch the video format to 1080p30*
<b>[#]</b> → <b>[#]</b> → <b>[7]</b>	Switch the video format to 1080p25*
<b>[#]</b> → <b>[#]</b> → <b>[8]</b>	Switch the video format to 720p30*
<b>[#]</b> → <b>[#]</b> → <b>[9]</b>	Switch the video format to 720p25*



 $\wedge$ 

The camera returns to the video output setting of the rotary dial after a reboot.

Use ONLY presets between 0-9 when using the Remote Control. For presets 10 or higher you need a serial or IP connection!



# **OSD** Menu

Each camera is provided with an Root menu Language **On-Screen Display (OSD) Menu.** Setup Protocol This is an integrated on-screen menu that Visca Address can be accessed within the camera to Visca Address Fix change specific functions that effect how Pelco-P Address the camera processes an image. Pelco-D Address The OSD Menu is visible on the HDMI, SDI, Baudrate USB and IP outputs. Autoflip The OSD menu can be accessed by the Camera Exposure Remote Control or an Avonic PTZ controller. Color Image Focus

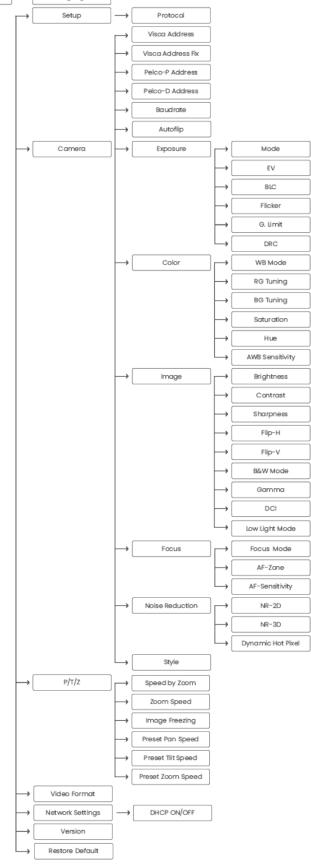


Figure 48: OSD menu structure



## 1. MENU

MENU		
	Language	en / Cn
	Setup	
	Camera	
	P/T/Z	
	Video Format	
	Version	
	Restore Default	
	Select Item	
	Change Value	
[Home	] Enter	
[Menu]	Exit	

#### Figure 49: OSD - MENU

- **1.** Press the *MENU* button to display the main menu on the screen.
- **2.** Use the arrow buttons to move the cursor to theitem to be set. Press the *HOME* button to enter the corresponding sub-menu.
- **3.** Press [◀▶] to change settings. Press [**MENU**] again to go back.

### 2. SETUP

23

SETUP		
► Protocol	AUTO /	VISCA / PELCO-D / PELCO-P
Visca Addre	ess 1~7	
Visca Addre	ess Fix ON / OF	F
PELCO-P Ad	dress 1 ~ 255	
PELCO-D Ac	ddress 1~255	
Baudrate	2400 / 4	4800 / 9600 / 38400 / 115200
Autoflip	on / of	F
▼▲ Select Item		
<b>∢</b> ► Change Va	lue	
[Menu] Back		

#### Figure 50: OSD - SETUP

# 3. CAMERA

CAMERA	
Exposure	
Color	
Image	
Focus	
Noise Reduction	
Style	Soft / Default / Normal / Clarity / Bright
▼▲ Select Item	
Change Value	
[Menu] Back	

#### Figure 51: OSD - CAMERA

# 3.1 EXPOSURE

EXPOSURE	
Mode	Auto / Manual / SAE / AAE / Bright
Iris	F11 ~ F1.8 / CLOSE
Shutter	1/25 ~ 1/10000
EV	ON / OFF
EV Level	-7 ~ +7
BLC	ON / OFF
Flicker	50Hz / 60Hz / OFF
G. Limit	0 ~ 15
DRC	1 ~ 8 / CLOSE
▼▲ Select Item	
Change Value	
[Menu] Back	

Figure 52: OSD - EXPOSURE

# 3.2 COLOR

COLOR	
WB Mode	Auto / 2400K ~ 7100K 100K increments / Manual / OnePush
RG Tuning	-10 ~ 10
BG Tuning	-10 ~ 10
RG	0 ~ 255
BG	0 ~ 255
Saturation	60% - 200%
Hue	0~14
AWB Sensitivity	Low / Middle / High
Select Item	
▲► Change Value	
[Menu] Back	

### Figure 53: OSD - COLOR

### 3.3 IMAGE

The Flip function can be set, although the camera has an automatically flip function.

IMAGE		
Brighti	ness	0 ~ 14
Contro	ast	0 ~ 14
Sharpi	ness	0 ~ 15
Flip-H		ON / OFF
Flip-V		ON / OFF
B&W-M	Node	Color / B&W
Gamn	na	0.45 / 0.50 / 0.55 / 0.63 / Default
DCI		1 ~ 8 / Close
Low Lię	ght Mode	ON / OFF
▼▲ Select	Item	
▲► Chang	ge Value	
[Menu] Back		

Figure 54: OSD - IMAGE

# 3.4 FOCUS

П

FOCUS		
	Focus Mode	Auto / Manual / OnePush
	AF-Zone	Top / Center / Bottom / All
	AF-Sensitivity	Low / Middle / High
▼▲	Select Item	
<b></b>	Change Value	
[Menu]	Back	

### Figure 55: OSD - FOCUS

## 3.5 NOISE REDUCTION

	NOISE REDUCTION	
	NR-2D	1~7 / Auto / OFF
	NR-3D	1~8/Auto/OFF
	Dynamic Hot Pixel	1 ~ 5 / OFF
	▼▲ Select Item	
	◆ Change Value	
	[Menu] Back	
L		

### Figure 56: OSD - NOISE REDUCTION

# 3.6 STYLE

STYLE	Style	Default / Normal / Clarity / Bright / Soft
<b>V</b>	Select Item	
	Change Value	
[Menu]	Back	

### Figure 57: OSD - STYLE

# **4.** PTZ

Г

PTZ		
Speed by	Zoom	ON / OFF
Zoom Spe	ed	1~8
Image Fre	ezing	ON / OFF
Preset Pai	n Speed	1 - 25
Preset Tilt	Speed	1 - 21
Preset Zoo	om Speed	1 - 8
▼▲ Select Iter	m	
▲► Change V	'alue	
[Menu] Back		

Figure 58: OSD - PTZ

# 6. NETWORK SETTINGS

DHCP	ON/OFF
IP Address	XXX.XXX.XXX
[Menu] Back	

### Figure 59: OSD - NETWORK SETTINGS

## 7. VERSION

VERSIG	ON		
	MCU Version	nr	date
	Camera Version	nr	date
	AF Version	nr	date
[Menu	u] Back		

Figure 60: OSD - VERSION

# 8. RESTORE DEFAULT

RESTORE DEFAULT					
	Restore default?	NO / YES			
▼▲	Select Item				
	Change Value				
[Menu]	Back				
[Home	] ОК				

Figure 61: OSD - RESTORE DEFAULT

# Using the Select Switch

The rear of the Product is provided with a Select Switch that can be used to manually select a video format. This switch is important for the video quality during video recording or streaming.

See the table below for a description of the possible settings and the associated video output quality.

	0	1080p60	8	720p30
04 23	1	1080p50	9	720p25
BA ST	2	1080i60	А	1080p59.94
081-	3	1080i50	В	1080i59.94
Figure 62: Select	4	720p60	С	720p59.94
Switch	5	720p50	D	1080p29.97
	6	1080p30	E	720p29.97
	7	1080p25	F	Default (via OSD / WebGUI)

A few notes on the select switch:

- The setting 'F' is the *default* setting. If you set the switch to 'F', you can set the video format via the *OSD Menu* or the *WebGUI*.
- The *highest* video output quality 1080p60 (setting '0').
- The *lowest* video output quality is 720p25 (setting '7').



 $\wedge$ 

It is recommended to set up the video output through the WebGUI or the OSD Menu, because this is much easier, than selecting the *video output* manually. If this is not possible, you can use the Select Switch.

#### IMPORTANT

- After changing the switch, you need to restart the camera to take effect.
- 720p30, 720p29.97 and 720p25 are not supported by the SDI output.
- There are four ways to select the video output of the camera (OSD / direct button combination on the remote control / WebGUI / rotary dial). The rotary dial takes priority after a reboot, except on setting F, where all the outputs are defined digitally.

# Maintenance

# **Camera Maintenance**

Take the following actions to maintain the camera:

- If you will not be using the camera for a long time, turn off the power switch and disconnect the AC powercord of the AC adaptor to the outlet.
- Use a soft cloth or tissue to clean the camera cover.
- Please use the soft dry cloth to clean the lens. If the camera is very dirty, clean it with diluted neutral detergent.



LA)

Do not use any type of solvents, which may damage the surface.

# **Usage Precautions**

 $\mathcal{B}$  Take the following precautions to ensure good image quality:

- Do not film extreme bright objects for a prolonged period of time, such as sunlight, light sources, etc.
- Do not operate in unstable lighting conditions, otherwise the produced image could be less than optimal.
- Do not operate close to powerful electromagnetic radiation, such as TV or radio transmitters, etc.



# Transport and Storage

The camera must be transported in its original packaging box. Inside the box, it is recommended to wrap the camera in the original plastic bag and to place it in the protective foam.

Specific guidelines apply to the environmental temperature and humidity when operating and storing the camera.

See 'Operating humidity' and 'Storage temperature' in the provided **Datasheet** for the applicable values.



# **Disposal and Recycling**

In general, the term 'E-Waste' applies to items of all types of electrical and electronic equipment and its parts that have been discarded by the owner as waste without the intention of re-use.

Avonic outsources the disposal and recycling of its E-Waste camera materials to the **Stichting Open**.



See <a href="https://stichting-open.org/">https://stichting-open.org/</a> for more information about the disposal and recycling.

# Troubleshooting

# General

ĽÅ)

Ľ

- **1.** Turn the camera off and on again and check if the problem persists.
- **2.** If it does, restore to the factory default.

# **Power Issues**

- If the camera does NOT perform a self-test and / or if the power LED is OFF:
- 1. Check the net power.
- **2.** Check the power supply.
- 3. Check the physical power button on the back of the camera.

# Image No image

- **1.** Check the power of the camera and monitor.
- 2. Check the quality and length of the video cable.
- 3. Check if the video specifications of monitor match the specifications of the camera.
- 4. Check if the Iris under *Exposure settings* is set to 'closed'.

# Abnormal image

- **1.** Check the quality and length of the video cable.
- **2.** Check the cable connections.
- 3. Check if the Iris under *Exposure settings* is set to 'closed'.

### Dithering or flickering image

- **1.** Check the camera fixation and nearby vibration sources.
- **2.** Check the *Anti-flickering* setting in the OSD.
- 3. Check the Noise Reduction settings in the OSD.

### Color issues



L)

L-

Check the OSD settings for *exposure*, white balance, color temp, Red and Bluetuning.



When experiencing image problems, you may also check Appendix D - CMOS Image Sensor Characteristics



### Autofocus Issues

- Check the *autofocus* (position, speed etc.) before streaming
- Check *Video/Camera Settings* in de WebGUI or the OSD menu (for example: if the image is too bright, too dark, or too noisy, the camera will have difficulties to focus



Ľċ)

ĽČ)

P

- Check environmental conditions and the subject of focussing. The camera will have difficulties to focus in the following situations:
- Light: Strong light, low light/dark areas and backlight conditions
- Moving subjects
- Small objects before a plain or solid background
- Blurry or unsharp subjects: filming through wet glass or dirty objects
- Distance: filming two or more different subjects, some near and some far away
- Position in the image: subject positioned in the corners of the picture
- Faces: partly hidden faces, sideways filmed faces, diagonal or up side down
- When the camera itself moves, or when the iris is narrowed down

When you experience one or more of the above mentioned problems check also our *Appendix - CMOS* characteristics

# Control No self-test (PTZ cameras only) and no power LED

1. Check the net power

2. Check the power supply

### Remote Controller does not work

- **1.** Check the power of the controller.
- 2. Check the RS-232 or RS-485 cable quality, length, polarity and network architecture.
- 3. Check the serial communication settings on the camera and controller.
- 4. Check the VISCA / PELCO address settings on the camera and controller.
- 5. Check the IP network settings on the camera and controller.

# WebGUI Cannot enter WebGUI

- **1.** Check the network cable.
- 2. Check if the computer is connected to the same subnet as the camera.
- **3.** Use an *incognito* window in your browser, sometimes cache issues arise when using multiple cameras that have the same default IP address
- 4. Reset the factory default IP settings by pressing [\*] [#] [Manual] and Reboot.

### Firmware update failed

- **1.** Check firmware file integrity, download it again.
- **2.** Make sure you are trying to flash the UVC file for the correct color camera (ARM is generic, UVC is color-dependent).

# Appendix A - VISCA Settings and Command List

VISCA is a professional camera control protocol used with PTZ cameras. It works by sending commands to the camera either over a serial or over an IP connection, in return the camera sends ACK acknowledgment and COM completion answers to let the sender know the commands have been received and completed. The *list* below describes the commands, ranges and camera answers.

Since the CM40 and CM70 series can be used both to control the camera, one document is provided for these series. Because the CM40 series differs in some features with the CM70 series, you need to read carefully the Command List. This VISCA Settings and Command list is available as an appendix in de manuals of the CM40 and CM70 series and as an separate document that you can download on the *product website*.

# Visca over Serial Connection

Visca is based on RS232 Serial communications at 9600 bit/s, 8N1, no flow control. VISCA uses a serial repeater network configuration to communicate between the controller (device #0) and up to 7 peripherals (#1 through #7). The daisy chain cable configuration means that a message walks the chain until it reaches the target device identified in the data packet. Responses then walk the rest of the way down the chain and back up again to reach the sender. Some packets are broadcast to all devices.

A command data packet consists of:

- Address byte (1) message header
- Information bytes (1..14)
- Terminating byte (1) 0xFF

You can use *Hercules SETUP Utility* application and a serial connection to make this work.

JDP Setup Serial	TCP Client TCP Serve	er UDP Test Mod	e About	
leceived/Sent data				
				Serial Name
				Baud
				9600 -
				Data size
				8 -
				Parity
				none 💌
				Handshake
				OFF 💌
				Mode
				Free
Modem lines	I CD I	RI 🔘 DSR 🌒	CTS DTR TR	A Open HWg FW update
Send				
			HEX Send	<b>HW</b> group
[			HEX Send	www.HW-group.com
				Hercules SETUP utility
			🔲 HEX Send	Version 3.2.8

# **VISCA over IP**

Avonic IP cameras are implemented with a TCP and an UDP server. The TCP as well as the UDP port are by default set to port *1259*.



The default VISCA address setting is **always 1** when using VISCA over IP. As all cameras are uniquely identified by their IP address, all VISCA addresses are set to 1, the serial addressing plays no part. For VISCA over IP, every command starts with **81 xx xx xx**.

Þ

Ľ.

i

To control the camera, you need an TCP or UDP supported application, like *Hercules SETUP utility* or *Packet Sender* for example. Follow the instructions below:

- **1.** Open the TCP/ UDP supported application.
- 2. Fill in the camera's IP Address, TCP/UDP port number and connect the application to your camera. Once the connection between client and server is set up, the client will be able to send PTZ commands to the server. The server then parses and executes the PTZ command.
- **3.** Fill in the command to be sent to the camera. The camera will send you the return commands.
- **4.** If you see the returned commands (in exception with UDP), the camera has executed the command. You can check this in the WebGUI of the camera.

Default settings:

- TCP port 1259
- UDP port 1259 (same port as TCP; is correct)
- VISCA address 1

The pictures below are showing an example of a VISCA command (Focus near) with their return commands. The green RX commands in the picture "Receive message" is the ACK command (to let the sender know that the command is received and executed) and the COM command (to confirm that the command has been successfully executed and completed). You can find these commands in the *Camera Return Command* list and the *Inquiry Command list*.

Note that the pictures below are ONLY an example to show you how a TCP supported application works. The pictures could be different from the application you are using!

Net	PTZ Manual
Protocol TCP UDP IP Address 192.168.5.163 Port 1259 Connect	8x 01 04 08 03 FF > 81 01 04 08 03 FF
VISCA IP address and port	VISCA command example
Receive message	
	Clear
TX: 81 01 04 08 03 FF (11:33:44.785) RX: 90 41 FF (11:33:44.791) RX: 90 51 FF (11:33:44.844)	



## Visca over IP using the full Sony Visca protocol

All Avonic cameras are capable of being controlled using the UDP Sony version of Visca consisting of long Visca commands, including headers and message counters. The advantage of using this version of Visca is the fact that the camera responds with the same header **counter** as was used in the command. This makes it possible to match each response to each command sent. This is especially helpful when programming automated camera control systems.



For the following example Hercules SETUP utility is used to recall preset 1 using VISCA. Follow the instructions below:

1. Set the local port and camera port. Both must be set to **52381**. Any other port won't work!

The camera will send its answers back to the port that was used to send the command (port 52381).

Ħ

Make sure that you have your **sent and receive** window set to display HEX data.

In the example below the camera is switched between:

- Preset 1: Visca command 81 01 01 3F 02 01 FF and
- Preset 2: Visca command 81 01 01 3F 02 02 FF
- **1.** Type the command in the **Send** box. The command consists of the **(camera) address**, marked in blue and 7 bytes marked in red. This means that the complete Visca command looks like this:
  - Preset 1: Visca command 010000070000001810101F0201FF
  - Preset 2: Visca command 01000007000000058101013F0202FF

The Visca over IP header consists of the 3rd and 4th bytes of the complete header. They indicate length of the payload (VISCA command). At this point, the value can vary depending on what Visca command is sent. Using the example of **Preset Recall 1** from above:

- 0100000700000018101013F0201FF the 4th byte is '7' meaning the payload of the Visca command is 7 bytes. Another point in the header is the message counter possibility on the 8th byte, in this instance it's '1'. On the second command where **Preset 2** was recalled, the message counter was set to '5'.
- 1. Click on **Send**. If you have done this correct, you should get the same as on the picture below:

SETUP utility by HW-group.com			_		$\times$
UDP Setup Serial TCP Client TCP Server UDP Test Mode Ab	out				
Received data					
<pre>{FF; (01; (11; (00; (03; (00; (00; (00; (01; (90; (11; (00; (03; (00; (00; (00; (01; (90; (11; (FF); (11; (00; (03; (00; (00; (00; (00; (00; (11; (FF); (11; (00; (03; (00; (00; (00; (00; (11; (FF); (11; (11; (11; (11; (11; (11; (11; (1</pre>	[01]	UDP Module IP 172.26.40 Local port 52381	.169	Port 52381 X Clos	
		Server sel	-		
Sent data					
{01}{00}{00}{07}{00}{00}{01} <b>{81}</b> {01}{04}	381	Redu	ect to TCF	Server	
{02}{01}{ <b>FF</b> }	,	🔲 Redi	ect to TCF	<sup>o</sup> Client	
{01}{00}{00}{07}{00}{00}{00}{05} <b>{81}</b> {01}{04}{ {02}{02}{ <b>FF</b> }	[3F}	UDP broa	dcast		
		File name: No file			
		Load	file	Send	
Send					
01000007000000018101043F0201FF	🔽 HEX	Send		Jgro	-
010000700000058101043F0202FF	₩ HEX	Send		HW-groups	
010000050000001581010604FF	🔽 HEX	Send		ersion 3	

# Camera Return Commands

All parameter values are in HEX.

- x = Camera Address
- y = Socket Number
- z = Camera Address + 8

⚠

This is one list for all Avonic PTZ Cameras (CM40 series and CM70 series). Some features are CM70 series ONLY and will not work with a CM40 series camera.

Return/complete Command					
Command	Function	Command Packet	Comments		
ACK/Completion Messages	ACK	90 4y FF (y: Socket No.)	Return when the command is accepted.		
	Completion	90 5y FF (y: Socket No.)	Return when the command has been executed.		

Error Command	Error Command					
Command	Function	Command Packet	Comments			
Error Messages	Syntax Error	90 60 02 FF	Returned when the command format is different or when a command with illegal command parameters is accepted.			
	Command Buffer Full 90 60 03 FF	Indicates that two sockets are already being used (executing two commands) and the command could not be accepted when received.				
	Command Canceled	90 6y 04 FF (y: Socket No.)	Returned when a command which is being executed in a socket specified by the cancel command is canceled. The completion message for the command is not returned.			
	No Socket	90 6y 05 FF (y: Socket No.)	Returned when no command is executed in a socket specified by the cancel command, or when an invalid socket number is specified.			
	Command Not Executable	90 6y 41 FF (y: Execution command Socket No. Inquiry command: 0)	Returned when a command cannot be executed due to current conditions. For example, when commands controlling the focus manually are received during auto-focus.			



# **Camera Control Commands**

All parameter values are in HEX

- x = Camera Address
- y = Socket Number
- z = Camera Address + 8

Command	Function	Command Packet	Comments	
Address Set	Broadcast	88 30 01 FF	Address setting	
CAM_Power	On	8x 01 04 00 02 FF	Power ON	
	Off	8x 01 04 00 03 FF	Power OFF	
	Reboot	8x 0A 01 06 01 FF	Reboot	
CAM_Zoom	Stop	8x 01 04 07 00 FF		
	Tele (Standard speed)	8x 01 04 07 02 FF	_	
	Wide (Standard speed)	8x 01 04 07 03 FF	_	
	Tele (Variable speed)	8x 01 04 07 2p FF	p = 0(low speed) -F(high	
	Wide (Variable speed)	8x 01 04 07 3p FF	speed)	
	Direct	8x 01 04 47 0p 0q 0r 0s FF	pqrs(0-F): Zoom Position	
	Zoom Wide ~ Tele	00 00 00 00 ~ 04 00 00 00 (PQRS)		
CAM_Focus	Stop	8x 01 04 08 00 FF		
	Far (Standard speed)	8x 01 04 08 02 FF		
	Near (Standard speed)	8x 01 04 08 03 FF	_	
	Far (Variable speed)	8x 01 04 08 2p FF	p = 0(low) - F(high)	
	Near (Variable speed)	8x 01 04 08 3p FF	_	
	Direct Focus Position	8x 01 04 48 0p 0q 0r 0s FF	min p = 0, q = 0, r = 0, s = 0 max p = 0, q = 6, r = E, s = A	
	Auto Focus	8x 01 04 38 02 FF	AF On	
	Manual Focus	8x 01 04 38 03 FF	AF Off AF Toggle On/Off	
	Auto/Manual	8x 01 04 38 10 FF		
	OnePush mode	8x 01 04 38 04 FF	_	
	OnePush trigger	8x 01 04 18 01 FF	_	
	Focus Near ~ Far	Variable ~ 00 00 00 00 (PQRS)	pqrs: Focus Position	
CAM_WB	Auto	8x 01 04 35 00 FF	Normal Auto	
	Indoor mode	8x 01 04 35 01 FF	Indoor mode	
	Outdoor mode	8x 01 04 35 02 FF	Outdoor mode	
	OnePush mode	8x 01 04 35 03 FF	One Push WB mode	
	OnePush trigger	8x 01 04 10 05 FF	One Push WB Trigger	
	Manual	8x 01 04 35 05 FF	Manual Control mode	



Commond	Frenchice	Commond De skot	Commonto
Command	Function	Command Packet	Comments
CAM_Bgain	Reset	8x 01 04 04 00 FF	Manual Control of BGain
	Up	8x 01 04 04 02 FF	
	Down	8x 01 04 04 03 FF	
	Direct	8x 01 04 44 00 00 0p 0q FF	pq: B Gain
CAM_Rgain	Reset	8x 01 04 03 00 FF	Manual Control of RGain
	Up	8x 01 04 03 02 FF	
	Down	8x 01 04 03 03 FF	
	Direct	8x 01 04 43 00 00 0p 0q FF	pq: R Gain
CAM_AE	Full Auto	8x 01 04 39 00 FF	Automatic Exposure mode
	Manual	8x 01 04 39 03 FF	Manual Control mode
	Shutter priority	8x 01 04 39 0A FF	Shutter Priority Automatic Exposure mode
	Iris priority	8x 01 04 39 0B FF	Iris Priority Automatic Exposure mode
	Bright	8x 01 04 39 0D FF	Bright Mode(Manual control)
CAM_Iris	Reset	8x 01 04 0B 00 FF	Iris Setting (CAM_AE isset to
	Up	8x 01 04 0B 02 FF	Manual)
	Down	8x 01 04 0B 03 FF	
	Direct Iris Position	8x 01 04 4B 00 00 0p 0q FF	(Manual and Iris Priority) min $p = 0 q = 0$ max $p = 0$ , $q = C$
CAM-Shutter	Direct	8x 01 04 4A 00 00 0p 0q FF	min $p = 0 q = 0$ max $p = 1 q = 0$
CAM_Gain	Reset	8x 01 04 0C 00 FF	Gain Setting
	Direct	8x 01 04 0C 00 00 0p 0q FF	pq: Gain Position 0 ~ 20 (0 = 00 HEX) Manual exposure
	Gain Limit	8x 01 04 2C 0p FF	p: Gain Position 0 $\sim$ 15 (0 = 00 HEX) Auto exposure
CAM_Bright (only works	Reset	8x 01 04 0D 00 FF	Bright Setting
with exposure mode Bright enabled)	Up	8x 01 04 0D 02 FF	
	Down	8x 01 04 0D 03 FF	
	Direct	8x 01 04 0D 00 00 0p 0q FF	pq: Bright Position (0 $\sim$ 23 max p = 1 and q = 7)
CAM_ExpComp(EV and EV	On	8x 01 04 3E 02 FF	Exposure Compensation On/
level)	Off	8x 01 04 3E 03 FF	Off
	Reset	8x 01 04 0E 00 FF	Exposure Compensation
	Up	8x 01 04 0E 02 FF	Amount Setting
	Down	8x 01 04 0E 03 FF	
	Direct	8x 01 04 4E 00 00 0p 0q FF	pq: ExpComp Position (min p = 0 max pq = 0E)
CAM_BackLight	On	8x 01 04 33 02 FF	Back Light Compensation On/
	Off	8x 01 04 33 03 FF	Off



Command	Function	<b>Command Packet</b>	Comments
CAM_NR(2D)Level	-	8x 01 04 53 0p FF	p: NR Setting (0: Off, level 1 to 7, 8 = AUTO)
CAM_NR(3D)Level	-	8x 01 04 54 0p FF	p: NR Setting (0: Off, level 1 to 8)
CAM_Flicker	-	8x 01 04 23 0p FF	p: Flicker Settings (0: Off, 1: 50Hz, 2: 60Hz)
CAM_DHotPixel	-	8x 01 04 56 0p FF	p: Dynamic Hot Pixel Setting (0: Off, level 1 to 5)
CAM_Aperture	Reset	8x 01 04 02 00 FF	Aperture Control
(sharpness)	Up	8x 01 04 02 02 FF	
	Down	8x 01 04 02 03 FF	
	Direct	8x 01 04 42 00 00 0p 0q FF	pq: Aperture Gain
CAM_PictureEffect	Off	8x 01 04 63 00 FF	Picture Effect Setting
	B&W	8x 01 04 63 04 FF	
CAM_Memory(preset)	Reset	8x 01 04 3F 00 pp FF	pp: Memory Number (=0 to
	Set	8x 01 04 3F 01 pp FF	127)
	Recall	8x 01 04 3F 02 pp FF	
CAM_LR_Reverse	On	8x 01 04 61 02 FF	Image Flip Horizontal On/Off
	Off	8x 01 04 61 03 FF	
CAM_PictureFlip	On	8x 01 04 66 02 FF	Image Flip Vertical On/Off
	Off	8x 01 04 66 03 FF	
Freeze (CM70 series ONLY)	Freeze ON	8x 04 04 62 02 FF	Freeze ON immediately
	Freeze OFF	8x 04 04 62 03 FF	Freeze OFF immediately
	Preset Freeze ON	8x 04 04 62 22 FF	Freeze ON when running preset
	Preset Freeze OFF	8x 04 04 62 23 FF	Freeze OFF when running preset
SYS_Menu	Off	8x 01 06 06 03 FF	Turns the OSD menu On/Off
	On	8x 01 06 06 02 FF	
CAM_ColorGain	Direct	8x 01 04 49 00 00 00 0P FF	p: Color Gain setting 0h (60%) to Eh (200%)



Camera Control Commands				
Command	Function	Command Packet	Comments	
Pan_tiltDrive	Up	8x 01 06 01 VV WW 03 01 FF	VV: Pan speed 0x01(low speed) to 0x18 (high speed) WW: Tilt speed 0x01(low speed) to 0x14 (high speed) YYYY: Pan Position ZZZZ: Tilt Position	
	Down	8x 01 06 01 VV WW 03 02 FF		
	Left	8x 01 06 01 VV WW 01 03 FF		
	Right	8x 01 06 01 VV WW 02 03 FF		
	Upleft	8x 01 06 01 VV WW 01 01 FF		
	Upright	8x 01 06 01 VV WW 02 01 FF		
	DownLeft	8x 01 06 01 VV WW 01 02 FF		
	DownRight	8x 01 06 01 VV WW 02 02 FF		
	Stop	8x 01 06 01 VV WW 03 03 FF		
	AbsolutePosition	8x 01 06 02 VV WW 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF		
	RelativePosition	8x 01 06 03 VV WW 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF		
	Pan range: -170° ~ +170°	0F 06 07 00 ~ 50 00 09 09 (YYYY)		
	Tilt range: -30° ~ +90°	0F 0E 04 05 ~ 00 05 01 00 (ZZZZ)		
	Home	8x 01 06 04 FF		
	Reset	8x 01 06 05 FF		
Pan_tiltLimitSet	LimitSet	8x 01 06 07 00 0W 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	W: 1 UpRight 0: Down-Left YYYY: Pan Limit Position ZZZZ: Tilt Position	
	LimitClear	8x 01 06 07 01 0W 07 0F 0F 0F 07 0F 0F 0F FF		
CAM_AFSensitivity	High	8x 01 04 58 01 FF	AF Sensitivity High/Normal/ Low	
	Normal	8x 01 04 58 02 FF		
	Low	8x 01 04 58 03 FF		
CAM_SettingReset	Reset	8x 01 04 A0 10 FF	Reset Factory Setting	
CAM_Brightness	Direct	8x 01 04 A1 00 00 0p 0q FF	pq: Brightness Position	
CAM_Contrast	Direct	8x 01 04 A2 00 00 0p 0q FF	pq: Contrast Position	
CAM_Flip	Off	8x 01 04 A4 00 FF	Single Command For Video Flip	
	Flip-H	8x 01 04 A4 01 FF		
	Flip-V	8x 01 04 A4 02 FF		
	Flip-HV	8x 01 04 A4 03 FF		
CAM_Autoflip	Autoflip ON	8x 01 02 70 02 FF	Autoflip ON	
	Autoflip OFF	8x 01 02 70 03 FF	Autoflip OFF	
CAM_SettingSave	Save	8x 01 04 A5 10 FF	Save Current Setting	
CAM_Iridix	Direct	8x 01 04 A7 00 00 0p 0q FF	pq: Iridix Position	



Camera Control Commands			
Command	Function	Command Packet	Comments
CAM_AWBSensitivity	High	8x 01 04 A9 00 FF	High
	Normal	8x 01 04 A9 01 FF	Normal
	Low	8x 01 04 A9 02 FF	Low
CAM_AFZone	Тор	8x 01 04 AA 00 FF	AF Zone weight select
	Center	8x 01 04 AA 01 FF	
	Bottom	8x 01 04 AA 02 FF	
CAM_ColorHue	Direct	8x 01 04 4F 00 00 00 0p FF	p: Color Hue setting0h (- 14 degrees) to Eh (+14 degrees
Pan-tilt_MaxSpeed	High SpeedPan/Tilt ON	8x 0A 01 31 03FF	High Speed PTON
	High SpeedPan/Tilt OFF	8x 0A 01 31 02FF	High Speed PTOFF
ARM/MCU_Version Inq	Inquiry ARM/MCU Version	8x 09 0A 0103 FF	Returned version in HEX, for example: 02 05 00 (version 2.5.0)
CAM/UVC_Version Inq	Inquiry Cam/UVC version	8x 09 00 02FF	Returned version in HEX, for example: 02 05 09 (version 2.5.9)
CAM_TallyLight(Cm7x only	Red	8x 01 7E 010A 00 02 03 FF	Tally Light RedON
with license active)	Green	8x 01 7E 010A 00 03 02 FF	Tally Light GreenON
	Off	8x 01 7E 010A 00 03 03 FF	Tally Light OFF
Preset_H_Speed	Horizontal (Pan) speed between presets	81 01 03 01 qqFF	qq= speed setting1 ~ 25 (1 = 00 HEX, 25 = 18 HEX)
Preset_V_Speed	Vertical (Tilt) speed between presets	81 01 03 02qq FF	qq = speed setting1 ~ 21 (1 = 00 HEX, 21 = 14 HEX)
Preset_Z_Speed	Zoom speed between presets	81 01 03 03qq FF	qq = speed setting1 ~ 8 (1 = 00 HEX, 8 = 07 HEX)
Blue_Tuning (autowhitebalance active)	more or less blue whilemaintaining auto white balance active	81 0A 01 13 ppFF	pp = setting -10 ~ +10(00~14 HEX)
Red_Tuning (autowhitebalance active)	more orless red while maintaining auto white balance active	81 0A 01 12 ppFF	pp = setting -10 ~ +10(00~14 HEX)



Camera Control Commands			
Command	Function	Command Packet	Comments
VideoSystem_Set		8x 01 06 35 00 pp FF	pp: Video Format
( <b>CM40 series:</b> It is possible to set the video format, but since the video format is dictated by the computer the camera is connected with, the picture will NOT change to			00: 1080p60
			01:1080p50
that format.)			02: 1080i60
			03: 1080i50
			04: 720p60
			05: 720p50 06: 1080p30 07: 1080p25
			08: 720p30
			09: 720p25
			0A: 1080p59.94
			0B: 1080i59.94
			0C: 720p59.94
			0D: 1080p29.97
			0E: 720p29.97



# **Inquiry Commands**

all parameter values are in hex

- x = camera address
- y = socket number
- z = camera address + 8

Command	Function	<b>Command Packet</b>	Comments
CAM_ZoomPosInq	8x 09 04 47 FF	90 50 0p 0q 0r 0s FF	pqrs: Zoom Position
CAM_FocusAFModeInq	8x 09 04 38 FF	90 50 02 FF	Auto Focus
		90 50 03 FF	Manual Focus
		90 50 04 FF	OnePush Focus
CAM_FocusPosInq	8x 09 04 48 FF	90 50 0p 0q 0r 0s FF	pqrs: Focus Position
CAM_WBModeInq	8x 09 04 35 FF	90 50 00 FF	Auto
		90 50 01 FF	Indoor mode
		90 50 02 FF	Outdoor mode
		90 50 03 FF	OnePush mode
		90 50 05 FF	Manual
CAM_RGainInq	8x 09 04 43 FF	90 50 00 00 0p 0q FF	pq: R Gain
CAM_BGainInq	8x 09 04 44 FF	90 50 00 00 0p 0q FF	pq: B Gain
CAM_GainInq (CM70 series ONLY)	8x 09 04 0C FF	90 50 00 FF	Manual Exposure Direct Gain
CAM_AEModeInq	8x 09 04 39 FF	90 50 00 FF	Full Auto
		90 50 03 FF	Manual
		90 50 0A FF	Shutter priority
		90 50 0B FF	Iris priority
		90 50 0D FF	Bright
CAM_ShutterPosInq	8x 09 04 4A FF	90 50 00 00 0p 0q FF	pq: Shutter Position
CAM_IrisPosInq	8x 09 04 4B FF	90 50 00 00 0p 0q FF	pq: Iris Position
CAM_BrightPosInq	8x 09 04 4D FF	90 50 00 00 0p 0q FF	pq: Bright Position
CAM_ExpComp-ModeInq	8x 09 04 3E FF	90 50 02 FF	On
		90 50 03 FF	Off
CAM_ExpCompPosInq	8x 09 04 4E FF	90 50 00 00 0p 0q FF	pq: ExpComp Position
CAM_Backlight-ModeInq	8x 09 04 33 FF	90 50 02 FF	On
		90 50 03 FF	Off
CAM_Noise2DLevel	8x 09 04 53 FF	90 50 0p FF	Noise Reduction (2D) p: 0 to 7, 8 = AUTO
CAM_Noise3DLevel	8x 09 04 54 FF	90 50 0p FF	Noise Reduction (3D) p: 0 to 8
CAM_FlickerModeInq	8x 09 04 55 FF	90 50 0p FF	p: Flicker Settings(0: OFF, 1: 50Hz, 2: 60Hz)
CAM_Aperture-ModeInq (Sharpness)	8x 09 04 05 FF	90 50 02 FF	Auto Sharpness
		90 50 03 FF	Manual Sharpness
CAM_ApertureInq(Sharpness)	8x 09 04 42 FF	90 50 00 00 0p 0q FF	pq: Aperture Gain
CAM_PictureEffectModeInq	8x 09 04 63 FF	90 50 00 FF	Color
		90 50 04 FF	B&W




Inquiry Commands			
Command	Function	Command Packet	Comments
CAM_MemoryInq	8x 09 04 3F FF	90 50 0p FF	p: Memory (Preset) number last operated.
SYS_MenuModeInq	8x 09 06 06 FF	90 50 02 FF	On
		90 50 03 FF	Off
CAM_LR_ReverseInq	8x 09 04 61 FF	90 50 02 FF	On
		90 50 03 FF	Off
CAM_PictureFlipInq	8x 09 04 66 FF	90 50 02 FF	On
		90 50 03 FF	Off
CAM_ColorGainInq	8x 09 04 49 FF	90 50 00 00 00 0p FF	p: Color Gain setting 0h (60%) to Eh (200%)
CAM_BTuningInq	81 09 0A 01 13 FF	90 50 pp FF	pp = setting -10 ~ +10 (00~14 HEX)
CAM_RTuningInq	81 09 0A 01 12 FF	90 50 pp FF	pp = setting -10 ~ +10 (00~14 HEX)
VideoSystemInq	8x 09 06 23 FF	90 50 00 FF	1920x1080p60
( <b>CM40 series:</b> It is possible to set the video format, but since		90 50 01 FF	1920x1080p50
the video format is dictated by the		90 50 02 FF	1920x1080i60
computer the camera is connected with, the picture will not change to		90 50 03 FF	1920x1080i50
that format.)		90 50 04 FF	1280x720p60
		90 50 05 FF	1280x720p50
		90 50 06 FF	1920x1080p30
		90 50 07 FF	1920x1080p25
		90 50 08 FF	1280x720p30
		90 50 09 FF	1280x720p25
		90 50 0A FF	1920x1080p59.94
		90 50 0B FF	1920x1080i59.94
		90 50 0C FF	1280x720p59.94
		90 50 0D FF	1920x1080p29.97
		90 50 0E FF	1280x720p29.97
Pan-tiltMaxSpeedInq	8x 09 06 11 FF	90 50 ww zz FF	ww: Pan Max Speed zz: Tilt Max Speed
Pan-tiltPosInq	8x 09 06 12 FF	90 50 0w 0w 0w 0w 0z 0z 0z 0z FF	wwww: Pan Position zzzz: Tilt Position
CAM_GainLimitInq	8x 09 04 2C FF	90 50 0q FF	p: Gain Limit
	8x 09 04 2C FF	90 50 07 FF	Auto exposure
CAM_DHotPixelInq	8x 09 04 56 FF	90 50 0q FF	p: Dynamic Hot Pixel Setting (0: Off, level 1 to 6)
CAM_AFSensitivityInq	8x 09 04 58 FF	90 50 01 FF	High
		90 50 02 FF	Normal
		90 50 03 FF	Low
CAM_BrightnessInq	8x 09 04 A1 FF	90 50 00 00 0p 0q FF	pq: Brightness Position
CAM_ContrastInq	8x 09 04 A2 FF	90 50 00 00 0p 0q FF	pq: Contrast Position



Command	Function	<b>Command Packet</b>	Comments
CAM_FlipInq	8x 09 04 A4 FF	90 50 00 FF	Off
		90 50 01 FF	Flip-H
		90 50 02 FF	Flip-V
		90 50 03 FF	Flip-HV
CAM_IridixInq	8x 09 04 A7 FF	90 50 00 00 0p 0q FF	pq: Iridix Position
CAM_AFZone	8x 09 04 AA FF	90 50 00 FF	Тор
		90 50 01 FF	Center
		90 50 02 FF	Bottom
CAM_ColorHueInq	8x 09 04 4F FF	90 50 00 00 00 0p FF	p: Color Hue setting 0h (-14 degrees) to Eh (+14 degrees)
CAM_AWBSensitivityInq	81 09 04 A9 FF	90 50 00 FF	High
		90 50 01 FF	Normal
		90 50 02 FF	Low
CAM_ZoomPosInq	8x 09 04 47 FF	90 50 0p 0q 0r 0s FF	pqrs: Zoom Position
CAM_FocusAFModeInq	8x 09 04 38 FF	90 50 02 FF	Auto Focus
		90 50 03 FF	Manual Focus
CAM_FocusPosInq	8x 09 04 48 FF	90 50 0p 0q 0r 0s FF	pqrs: Focus Position
CAM_WBModeInq	8x 09 04 35 FF	90 50 00 FF	Auto
		90 50 01 FF	Indoor mode
		90 50 02 FF	Outdoor mode
		90 50 03 FF	OnePush mode
		90 50 05 FF	Manual
CAM_RGainInq	8x 09 04 43 FF	90 50 00 00 0p 0q FF	pq: R Gain
CAM_BGainInq	8x 09 04 44 FF	90 50 00 00 0p 0q FF	pq: B Gain
CAM_AEModeInq	8x 09 04 39 FF	90 50 00 FF	Full Auto
		90 50 03 FF	Manual
		90 50 0A FF	Shutter priority
		90 50 0B FF	Iris priority
		90 50 0D FF	Bright
CAM_ShutterPosInq	8x 09 04 4A FF	90 50 00 00 0p 0q FF	pq: Shutter Position
CAM_IrisPosInq	8x 09 04 4B FF	90 50 00 00 0p 0q FF	pq: Iris Position
CAM_BrightPosInq	8x 09 04 4D FF	90 50 00 00 0p 0q FF	pq: Bright Position
CAM_PowerInq	8x 09 04 00 FF	y0 50 02 FF	On
		y0 50 03 FF Off	Off (Standby)



# Appendix B - Dimensions

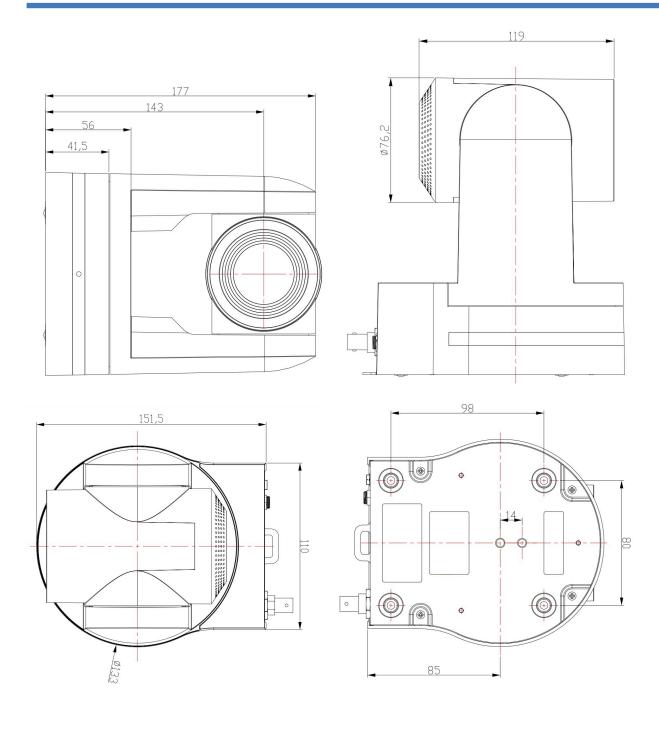

# Appendix C - HTTP API

With the HTTP API you can control the camera by using a web browser like Microsoft Edge or Google Chrome for example. It is possible to change multiple settings at once using this feature. This document is available as an Appendix in the CM7x manual and as a separate document that can be downloaded on the *product website*.

#### How to use HTTP API

To use the HTTP API you need the following link: http://192.168.5.126/ajaxcom?szCmd=

Follow instructions below:

- 1. Click on the link above, or copy and paste it to your browser.
- Note that the IP Address in this link is an example of an IP address. Change this IP Address to the one you use for your camera. See Network > Ethernet > IP Address.
- **3.** Copy the code from the list. Remember that some codes are documented over **multiple lines** and that you need to **copy this from the first to the last bracket!** See the example below:

Function	Code		Co	ommand	Setting
Enable	{"SetEnv":{"StreamPublish":[{"stMaster":{"wHostPort":1935, "bEnable":1,"nProtolType":3},"nChannel":0}]}}		bE	Enable	0: off 1: on
Protol Type			nF	ProtolType	2: srt 3: rtmp
Host Address		":[{"stMaster":{"wHostPort":1935, ': "192.168.5.12"},"nChannel":0}]}}	SZ	HostUrl	user-defined
Host Port	{"SetEnv":{"StreamPublish "nProtolType":3},"nChanne	":[{"stMaster":{"wHostPort":19355,  ":0}]}}	w	HostPort	[0,65535]
Stream Name	{"SetEnv": {"StreamPublish" {"wHostPort": 19355, "nProt "live/1213"}, "nChannel": 0}	olType":3,"szStreamName":	SZ	StreamName	user-defined
User Name	{"SetEnv":{"StreamPublish "nProtolType":3,"szUserNar		Ctrl+C	IserName	user-defined
Password	{"SetEnv":{"StreamPublish "nProtolType":3,"szPasswor	Q         Search the web for "("SetEnv":("StreamPublish":((""           Image: Search in sidebar for "("SetEnv":("StreamPublish":((""         Ctrl+S	hift+E	assword	user-defined
SrtKey (SRT Effectie)	{"SetEnv": {"StreamPublish {"wHostPort": 19355, "nProt "0123456789"}, "nChannel"	ම Print අත්ත කරීම අත්ත ක කරීම අත්ත කරීම අත්ත කර	Ctrl+P	rtKey	user-defined
SrtKeyLen (SRTEffectie)	{"SetEnv":{"StreamPublish "nProtolType":3,"wSrtKeyLe	•	Ctrl+] Ctrl+[	rtKeyLen	[0-32]
		Web capture Ctrl+S	hift+S		
<b>RTP Multica</b>	st	□ Inspect			

4. Paste the code at the end of HTTP link. It will look like this:

 $\leftarrow \rightarrow \bigcirc \qquad (192.163.5.126/ajaxcom?szCmd={"SysCtrl":{"PtzCtrl":{"nChanel":0,"szPtzCmd":"left_start","byValue":50}})})$ 

**5.** Change the settings in the link. In this case:

O (D) 192.163.5.126/ajaxcom?szCmd={"SysCtrl":{"PtzCtrl":{"nChanel":0,"szPtzCmd":"left\_start","byValue":50}}}

6. Press ENTER. If correct, you get in return:

 $\leftarrow \rightarrow C \oplus 192.163.5.126/ajaxcom?szCmd={"SysCtrl":{"PtzCtrl":{"nChanel":0,"szPtzCmd":"left_start","byValue":50}}}$ 

{"nRetVal":0, "szError":""}

 $\leftarrow$ 

If *failed*, you get in return.

 $\leftarrow \rightarrow C \quad \textcircled{192.163.5.126/ajaxcom?szCmd={"SysCtrl":{"PtzCtrl":{"nChanel":0,"szPtzCmd":"left_start","byValue":50}}}$ 

{"nRetVal":-1879048185, "szError":""}



- **7.** In case of a failed return, check the following:
  - Brackets in the code. Have you copy and paste the first and the last bracket?
  - Syntax errors in the code/ correct numbers in the key values. Some camera settings are having a specific range. The SRT key for example has a range of 0 32. If you have typed 33 it would exceed the range of this key.
  - No long white spaces between the key values of the code. For example this " code " is error and this "code" is right.
  - If you have typed the correct IP address of the camera.
- **8.** If you have done it correct, you can check the settings you have changed in the WebGUI of the camera.

#### Curl

It is also possible to change the camera settings at once by using the Command Prompt from Windows.

12

Follow instructions below:

- 1. Click on Start in the left corner of your screen in Windows.
- **2.** Type *Notepad* and open this application.
- **3.** Copy and paste the following http link: *http://192.168.5.126/ajaxcom* and the **code** in the *HTTP API code list* in *Notepad*.
- **4.** Type *curl*, change the default IP address in the IP Address of your camera, and surround it by quotation marks.
- **5.** Add *--data-raw* between the http link and the code.
- 6. Type *szCmd* and surround it by quotation marks.
- 7. Double the quotation marks between the brackets! See the example below.

4	5 6 7
curl "http://172.26.40.147/ajaxcom	" <mark>data-raw</mark> "szCmd={""SetEnv"":{""VideoParam"":[{""stAF"":{""emAFMode"":3},""nChannel"":0}]}}"
Changed link (IP address camera)	Code from the HTTP API code list

- **8.** Modify the parameters in the code. In the example above *EmAFmode:3* and *nChannel:0* See the *HTTP API code list.*
- 9. Click on Start in Windows again, type CMD and press Enter.
- **10.**Copy and paste the link/ code from notepad in *Command Prompt* and press **Enter**.

**11**If correct it returns: {"nRetVal":0, "szError":""}

Command Prompt			×
Microsoft Windows [Version 10.0.19042.1526] (c) Microsoft Corporation. All rights reserved.			^
C:\Users\Avonic>curl "http://172.26.40.147/ajaxcom"data-raw "szCmd={""SetEnv"":{""VideoParam"":[{""stAF"":{""emAFMode"":3},""nCha {"nRetVal":0, "szError":""} C:\Users\Avonic>	nnel"":	0}]}}"	



#### {"GetEnv"}

You can also use the HTTP API to **display the current settings** of the camera in your browser or in the *Command Prompt* application. To do this, you need the {"GetEnv"} codes from the HTTP API code list. If correct you get the following result:

rosoft Windows [Version 10.0.19044.1526]	- 🗆 🗙
Microsoft Corporation. All rights reserved.	
Jsers\Avonic>curl "http://172.26.40.147/ajaxcom"data-raw "szCmd={""GetEnv"":{""StreamPublish"":{""nChan	nel"":-1}}}"
"nRetVal": 0,	
"stValue": [	
{     "stSlave": {	
"WHostPort": 1935,	
"szHostUrl": "172.40.26.147",	
"nProtolType": 2,	
"szStreamName": "live/av1",	
"bEnable": 0,	
"nAbProtolMask": 1, "szSrtKey": "",	
"SZUSERName": "",	
"szPassword": ""	
},	
"stMaster": {	
"wHostPort": 1935, "szHostUrl": "172.40.26.147",	
szmostori : 1/2.40.20.14/ , "nProtolType": 3,	
"szstreamName": "live/av0",	
"bEnable": 0,	
"nAbProtolMask": 1,	
"szSrtKey": "1111111111",	
"wSrtKeyLen": 0,	
"szUserName": "", "szPassword": ""	
}, },	
"nChannel": 0	
}	
Jsers\Avonic>	

**Command Prompt** 

## PTZ

PTZControl			
Code: http://192.16	8.5.126/ajaxcom?szCmd={"SysCtrl":{"PtzCtrl":{"nChanel":0,	"szPtzCmd":"left_start","byValue	e":50}}}
Command	Setting	Function	Command
nChanel	0		
byValue	0,100 used to control the speed of ptz		
szPtzCmd			
		left start	left_start
		left stop	left_stop
		leftup start	leftup_start
		leftup stop	leftup_stop
		leftdown start	leftdown_start
		leftdown stop	leftdown_stop
		rightstart	right_start
		rightstop	right_stop
		rightup start	rightup_start
		rightdown start	rightdown_start
		rightdown stop	rightdown_stop
		upstart	up_start
		upstop	up_stop
		downstart	down_start
		downstop	down_stop

### PTZ speed

Set PTZ Speed			
Command	Code	Command	Setting
szCmd	{"SetEnv":{"PTZSpeed":	nPTZSpeed	0: Slow
	{"nPTZSpeed":1}}}		1: High

### Speed by zoom

Set Speed By Zoom				
Command	Code	Command	Setting	
szCmd	{"SetEnv":{"ArmPtz":{"bSpeedByZoom":0}}}	bSpeedByZoom	1: on 0: off	

### Image Freezing

Set Image Freezing				
Command	Code	Command	Setting	
szCmd	{"SetEnv":{"ArmPtz":{"bImageFreezing":0}}}	bImageFreezing	1: on 0: off	



### Low power mode

Set Low Power Mode				
Command	Code	Command	Setting	
szCmd	{"SetEnv":{"ArmPtz":{"emLowPowerMode":0}}}	emLowPowerMode	2: on 3: off	

### Zoom Speed

Set Zoom Speed				
Command	Code	Command	Setting	
szCmd	{"SetEnv":{"ArmPtz":{"nZoomSpeed":0}}}	nZoomSpeed	0 - 7	

#### Preset Pan Speed

Set Preset Pan Speed			
Command	Code	Command	Setting
szCmd	{"SetEnv":{"ArmPtz":{"nPresetPanSpeed":0}}}	nPresetPanSpeed	0 - 24

### Preset Tilt Speed

Set Preset Tilt Speed				
Command	Code	Command	Setting	
szCmd	{"SetEnv":{"ArmPtz":{"nPresetTiltSpeed":0}}}	nPresetTiltSpeed	0 - 20	

### Preset Zoom Speed

Set Preset Zoom Speed				
Command	Code	Command	Setting	
szCmd	{"SetEnv":{"ArmPtz":{"nPresetZoomSpeed":0}}}	nPresetZoomSpeed	0 - 7	

#### Focus Mode

Focus Mode Commands				
Focus Mode				
Code	{"SetEnv":{"VideoParam":[{"stAF	{"SetEnv":{"VideoParam":[{"stAF": {"emAFMode":3},"nChannel":0}]}}		
Command	Setting			
nChanel	0			
emAFMode	2: Auto			
	3: Manual			
	4 OnePush			
Zoom and focus				
Code	{"SysCtrl":{"PtzCtrl":{"nChanel":	),"szPtzCmd":"zoomdec_start","by	Value":0}}}	
Command	Setting Function Command			
nChanel	0			
byValue	0			



Focus Mode Commands		
szPtzCmd		
	Zoom add start	zoomadd_start
	Zoom add stop	zoomadd_stop
	Zoom decrease stop	zoomdec_start
	Zoom decrease stop	zoomdec_stop
	Focus add start	focusadd_start
	Focus add stop	focusadd_stop
	Focus decrease start	focusdec_start
	Focus decrease stop	focusdec_stop

#### Preset

Preset Commands			
Code	{"SysCtrl":{"PtzCtrl":{"nChanel":0,"szPtzCmd":"preset_set","byValue":0}}}		
Command	Setting Function Command		
nChanel	0s		
ByValue	0, 254		
szPtzCmd			
		Set preset	preset_set
		Call preset	preset_call
		Clean preset	preset_clean

## Audio

Audio Con	figure		
Get audio co	nfigure		
Code	{"GetEnv":{"Audio":{}}}		
Set audio cor	nfigure		
Code {"SetEnv":{"Audio":{"nSampleBits":16,"nAudioSmstMask": [33554888,33554888,33554433],"bEnable":0,"nInpVolume":4,"nBitRate":64,"nAEncType":7,"byAudioCodecList": [6,7,2],"nSampleRate":44100,"nChannel":1}}}			
Function	Code	Command	Setting
Enable	{"SetEnv":{"Audio":{"bEnable":1}}}	bEnable	0: off 1: on
Encode Type	{"SetEnv":{"Audio":{"nAEncType":7}}}	nAEncType	6: Mp3AAC 7: G.711A 2:
Sample Rate	{"SetEnv":{"Audio":{"nSampleRate":32000}}}	nSampleRate (Only supporting these sample rates and gy11a can only be 8000.)	16000 32000 44100 48000
Sample Bits	{"SetEnv":{"Audio":{"nSampleBits":16}}}	nSampleBits	16



Audio Configure				
Bit Rate	{"SetEnv":{"Audio":{"nBitRate":96}}}	nBitRate	32 48 64 96 128	
Channel	{"SetEnv":{"Audio":{"nChannel":2}}}	nChannel	1: Mono 2: Stereo	
Input Volume	{"SetEnv":{"Audio":{"nInpVolume":5}}}	nInpVolume (range 1 to 10)	Exp:[1, 10]	

## Video

### Video encoder

Video Enco	Video Encode			
Get video en	Get video encode parameters			
Code	{"GetEnv":{"VideoEncode":{"nChannel":-1}}}			
Set video en	Set video encode parameters			
Code	<pre>{"SetEnv":{"VideoEncode":[{"stSlave":{"byIFrameMinQP":20,"byImageQuality":1, "szStreamName":"live/av1","dwVideoCodecMask":160,"emBitRateCtrl":0, "byImageSizeList": [26,7,9,27,4,5],"dwMaxBitRate":40960,"nFrameRate":25,"nMaxFrameRate":30, "emVideoCodec":5,"nIFrameInterval":75,"emImageSize":27,"nBitRate":512,"byProfile":2}, "stMaster":{"byIFrameMinQP":20,"byImageQuality":0,"szStreamName":"live/av0", "dwVideoCodecMask":160,"emBitRateCtrl":0,"byImageSizeList":[5,4,9],"dwMaxBitRate":40960, "nFrameRate":25,"nMaxFrameRate":60,"emVideoCodec":5,"nIFrameInterval":75,"emImageSize":5, "nBitRate":4096,"byProfile":2},"nChannel":0}]}}</pre>			

### Video encode settings

Video Encode Settings				
Function	Code	Command	Setting	
Compressed Format	{"SetEnv":{"VideoEncode":[{"stMaster": {"emVideoCodec":5},"nChannel":0}]}}	emVideoCodec	5: H.264 7: H.265 (BP profile only)	
Profile	{"SetEnv":{"VideoEncode":[{"stMaster": {"byProfile":0},"nChannel":0}]}}	byProfile	0: BP 1: MP 2: HP	
	{"GetEnv":{"VideoEncode": {"nChannel":-1}}} and receive its returning value. Compared to webpage and this, you can know the different value meaning different image size.	byImageSizeList (Lists all imagesize, different products have different image size)		
Image Size	{"SetEnv":{"VideoEncode":[{"stMaster": {"emImageSize":4},"nChannel":0}]}}	emImageSize	5: 1920*1080 4: 1280*720 9: 640*480 27: 320*180 26: 640*360	
Rate Control	{"SetEnv":{"VideoEncode":[{"stMaster": {"emBitRateCtrl":1},"nChannel":0}]}}	emBitRateCtrl	0: CBR 1: VBR	



Video Encode Setti	Video Encode Settings				
Function	Code	Command	Setting		
Image Quality	{"SetEnv":{"VideoEncode":[{"stMaster": {"byImageQuality":5},"nChannel":0}]}}	byImageQuality	0: worst quality 1: between 2: between 3: between 4: between 5: Best quality		
Bit Rate (kb/s)	{"SetEnv":{"VideoEncode":[{"stMaster": {"dwMaxBitRate":200},"nChannel":0}]}}	dwMaxBitRate	[64, 40960]		
Frame Rate (F/S)	{"SetEnv":{"VideoEncode":[{"stMaster": {"nFrameRate":25},"nChannel":0}]}}	nFrameRate	[5, 60]		
Frame Interval	{"SetEnv":{"VideoEncode":[{"stMaster": {"nIFrameInterval":70},"nChannel":0}]}}	nIFrameInterval	[1, 300]		
Frame Min QP	{"SetEnv":{"VideoEncode":[{"stMaster": {"byIFrameMinQP":70},"nChannel":0}]}}	byIFrameMinQP	[10, 51]		
Stream Name	{"SetEnv":{"VideoEncode": [{"stMaster": {"szStreamName":"live/av01"},"nChannel":0}]}}	szStreamName	user-defined		

### Video Streaming

Stream Publ	ish		
Get stream pub	lish parameters		
Code	{"GetEnv":{"StreamPublish":{"nChannel":-1}}}		
Set stream pub	lish parameters		
Code	<pre>{"SetEnv":{"StreamPublish":[{"stSlave":{"wHostPort":1935,"szHostUr "nProtolType":2,szStreamName":"live/ av1","bEnable":0,"nAbProtolMask":1,"szSrtKey":"","wSrtKeyLen":0,"sz {"wHostPort":1935, "szHostUrl":"192.168.5.11","nProtolType":3,"szSt av0","bEnable":0, "nAbProtolMask":1,"szSrtKey":"1111111111","wSrt "szPassword":""},"nChannel":0}]}</pre>	zUserName":"","szPa: reamName":"live/ KeyLen":0,"szUserNa	me":"",
Function	odifying one param, you should take along wHostPort. Otherwis Code	e, the host port wi	Il be zero.
Enable	{"SetEnv":{"StreamPublish":[{"stMaster": {"wHostPort":1935,"bEnable":1,"nProtolType":3},"nChannel":0}]}}	bEnable	0: off 1: on
Protol Type		nProtolType	2: srt 3: rtmp
Host Address	<pre>{"SetEnv":{"StreamPublish":[{"stMaster":     {"wHostPort":1935,"nProtolType":3",szHostUrl":     "192.168.5.12"},"nChannel":0}]}}</pre>	szHostUrl	user-defined
Host Port	{"SetEnv":{"StreamPublish":[{"stMaster": {"wHostPort":19355,"nProtolType":3},"nChannel":0}]}}	wHostPort	[0,65535]
Stream Name	<pre>{"SetEnv":{"StreamPublish":[{"stMaster": {"wHostPort":19355,"nProtolType":3,"szStreamName":"live/1213"}, "nChannel":0}]}}</pre>	szStreamName	user-defined
User Name	<pre>{"SetEnv":{"StreamPublish":[{"stMaster":     {"wHostPort":19355,"nProtolType":3,"szUserName":"123"},     "nChannel":0}]}}</pre>	szUserName	user-defined
Password	<pre>{"SetEnv":{"StreamPublish":[{"stMaster":     {"wHostPort":19355,"nProtolType":3,"szPassword":"123"},     "nChannel":0}]}</pre>	szPassword	user-defined



Stream Publis	Stream Publish				
SrtKey (SRT Effectie)	{"SetEnv":{"StreamPublish":[{"stMaster": {"wHostPort":19355,"nProtolType":3,"szSrtKey":"0123456789"}, "nChannel":0}]}}	szSrtKey	user-defined		
SrtKeyLen (SRTEffectie)	{"SetEnv":{"StreamPublish":[{"stMaster": {"wHostPort":19355,"nProtolType":3,"wSrtKeyLen":"0"}, "nChannel":0}]}}	wSrtKeyLen	[0-32]		

### (RTP) Multicast Streaming

RTP Multicast			
Get rtp multicast parameters			
Code	{"GetEnv":{"StreamRTPMulticast":{"nChannel":-1}}}		
Set rtp multicast parameters			
Code	<pre>{"SetEnv":{"StreamRTPMulticast":[{"stSlave": {"nProtolType":0,"bEnable":0,"wMultiCastPort":4002, "szMultiCastUrl":"224.1.2.3"},"stMaster": {"nProtolType":1,"bEnable":0,"wMultiCastPort":4000, "szMultiCastUrl":"224.1.2.3"},"nChannel":0}]}}</pre>		
NOTE: When modifying one param you should take along bEnable and awMultiCastPort. Otherwise, it will be set to 0. Suggesting that when setting env, you can distinguish the stMaster and stSlave.			

#### RTP Multicast Settings

RTP Multicast Settings					
Function	Code	Command	Setting		
Enable	{"SetEnv":{"StreamRTPMulticast":[{"stMaster": {"bEnable":1,"wMultiCastPort":4004},"nChannel":0}]}}	bEnable	0: off 1: on		
Protol Type	{"SetEnv":{"StreamRTPMulticast":[{"stMaster": {"bEnable":1,"nProtolType":1,"wMultiCastPort":4004}, "nChannel":0}]}}	nProtolType	0: RTP 1: TS		
Multicast Address	{"SetEnv":{"StreamRTPMulticast":[{"stMaster": {"bEnable":0,"szMultiCastUrl":"224.1.2.23","wMultiCastPort": 4004}, "nChannel":0}]}}	SzMultiCastUrl	224.0.0.0~ 255.255.255.0		
Multicast Port	{"SetEnv":{"StreamRTPMulticast":[{"stMaster": {"bEnable":1,"wMultiCastPort":4004},"nChannel":0}]}}	wMultiCastPort	Even [0, 65535]		

#### Camera Settings

Video Param	eters		
Get video paran	neters	· · · · · ·	
Code	{"GetEnv":{"VideoParam":{"nChannel":-1	}}}	
Set video param	leters		
Focus			
Function	Code	Command	Setting
Focus Mode	{"SetEnv": {"VideoParam": [{"stAF": {"emAFMode":2},"nChannel":0}]}}	emAFMode	2: Auto 3: Manual 4: OnePush



Video Paramete	ers		
AF-Zone	{"SetEnv": {"VideoParam": [{"stAF": {"emAFZone":1},"nChannel":0}]}}	emAFZone	0: Top 1: Center 2: Bottom 3: All
AF-Sensitivity	{"SetEnv": {"VideoParam": [{"stAF": {"nSensitivity":1},"nChannel":0}]}}	nSensitivity	1: High 2: Middle 3: Low

#### Exposure

Came	Camera Settings					
Expo	sure					
Mode	{"SetEnv":{"VideoParam":[{"stExp":{"stExpMode": {"emExpMode":0}}, "nChannel":0}]}}	emExpMode	0: 3: 10: 11: 13:	Auto Manual SAE AAE Bright		
Expo	sure: Auto					
EV	{"SetEnv":{"VideoParam":[{"stExp": {"expcomp_mode":2},"nChannel":0}]}}	expcomp_mode	2: 3:	ON OFF		
EV Level	{"SetEnv":{"VideoParam":[{"stExp": {"expcomp":8},"nChannel":0}]}}	expcomp	[0, 14]			
BLC	{"SetEnv":{"VideoParam":[{"stExp": {"backlight":2},"nChannel":0}]}}	backlight	2: 3:	ON OFF		

#### **Camera Settings**

<b>Exposure:</b>	Auto
------------------	------

Exposure: Auto				
Function	Code	Command	Setting	
Flicker	<pre>{"SetEnv":{"VideoParam":[{"stExp": {"antiflicker":0},"nChannel":0}]}}</pre>	antiflicker	0: OFF 1: 50HZ 2: 60HZ	
G.Limit	<pre>{"SetEnv":{"VideoParam":[{"stExp": {"gainLimit":5},"nChannel":0}]}}</pre>	gainLimit	[0, 15]	
DRC	<pre>{"SetEnv":{"VideoParam":[{"stExp": {"drc":6},"nChannel":0}]}}</pre>	drc	[0, 8]	
Exposure: Ma	nual			
shutter	<pre>{"SetEnv":{"VideoParam":[{"stExp":{"stShutter": {"nShutter":16}},"nChannel":0}]}}</pre>	nShutter	[0, 16]	
Iris	<pre>{"SetEnv":{"VideoParam":[{"stExp":{"stIris": {"nIris":12}},"nChannel":0}]}}</pre>	nIris	[0, 12]	
DRC	<pre>{"SetEnv":{"VideoParam":[{"stExp": {"drc":8},"nChannel":0}]}}</pre>	drc	[0, 8]	
Exposure: SA	E			
shutter	<pre>{"SetEnv":{"VideoParam":[{"stExp":{"stShutter":     {"nShutter":16}},"nChannel":0}]}}</pre>	nShutter	[0, 16]	
DRC	<pre>{"SetEnv":{"VideoParam":[{"stExp": {"drc":7},"nChannel":0}]}}</pre>	drc	[0, 8]	

Camera Settings					
Exposure: AEE					
Flicker	{"SetEnv":{"VideoParam":[{"stExp": {"antiflicker":0},"nChannel":0}]}}	Antiflicker	0: 1: 2:	OFF 50HZ 60HZ	
G.Limit	{"SetEnv":{"VideoParam":[{"stExp": {"gainLimit":5},"nChannel":0}]}}	gainLimit	[0, 15]		
Iris	<pre>{"SetEnv":{"VideoParam":[{"stExp":{"stIris": {"nIris":12}},"nChannel":0}]}}</pre>	nIris	[0, 12]		
DRC {"SetEnv":{"VideoParam":[{"stExp": {"drc":6},"nChannel":0}]}}		drc	[0, 8]		
Exposure: Bright	Exposure: Bright				
Bright	{"SetEnv":{"VideoParam":[{"stExp": {"bright":0},"nChannel":0}]}}	bright	[0, 23]		
Flicker, G.Limit, DRC	You can find the same configure at AAE				

### Color and Image

Camera Settings						
Color						
Function	Code	Command	Setting			
WB Mode	{"SetEnv":{"VideoParam": [{"stColor":{"stWbMode": {"emWbMode":0}},"nChannel":0}]}}	emWbMode	0: 1: 7: 2: 8: 4: 9: 10: 6: 11: 5: 3:	Auto 3000K 3500K 4000K 4500K 5500K 6500K 6500K 7000K Manual OnePush		
RG Tuning	<pre>{"SetEnv":{"VideoParam":[{"stColor": {"rgaintuning":0},"nChannel":0}]}}</pre>	rgaintuning	[0, 20]			
BG Tuning	{"SetEnv":{"VideoParam":[{"stColor": {"bgaintuning":20},"nChannel":0}]}}	bgaintuning	[0, 20]			
Saturation	<pre>{"SetEnv":{"VideoParam":[{"stColor":     {"saturation":0},"nChannel":0}]}}</pre>	saturation	[0, 14]			
Hue	<pre>{"SetEnv":{"VideoParam":[{"stColor":     {"hue":14},"nChannel":0}]}}</pre>	hue	[0, 14]			
AWB Sensitivity	<pre>{"SetEnv":{"VideoParam":[{"stColor": {"awbsens":0},"nChannel":0}]}}</pre>	awbsens	0: 1: 2:		Low Middle High	

Camera Settings					
Image					
Bright	{"SetEnv": {"VideoParam":[{"stImg": {"luminance":0},"nChannel":0}]}}	luminance	[0, 4]		
Contrast	{"SetEnv": {"VideoParam":[{"stImg": {"contrast":0},"nChannel":0}]}}	contrast	[0, 14]		
Sharpness	{"SetEnv": {"VideoParam":[{"stImg": {"sharpness":1},"nChannel":0}]}}	sharpness	[0, 15]		
Gamma	{"SetEnv": {"VideoParam":[{"stImg": {"gamma":0},"nChannel":0}]}}	gamma	[0, 4]	0: Default 1: 0.45 2: 0.50 3: 0.55 4: 0.63	
DCI	{"SetEnv": {"VideoParam":[{"stImg": {"dci":0},"nChannel":0}]}}	dci	[0, 8] 0:	OFF	
B&W Mode	{"SetEnv": {"VideoParam":[{"stImg": {"nBWMode":0},"nChannel":0}]}}	nBWMode	0: 4:	Color B & W	
Flip-H	{"SetEnv": {"VideoParam":[{"stImg": {"nFlipH":3},"nChannel":0}]}}	nFlipH	2: 3:	ON OFF	

Camera Settings							
Image	Image						
Function	Code	Command	Setting				
Flip-V	{"SetEnv":{"VideoParam":[{"stImg": {"nFlipV":2},"nChannel":0}]}}	nFlipV	2: 3:	ON OFF			
AutoFlip	<pre>{"SetEnv":{"VideoParam":[{"stImg":     {"nAutoFlipV":2},"nChannel":0}]}}</pre>	nAutoFlipV		ON OFF			
DZoom	<pre>{"SetEnv":{"VideoParam": [{"stImg":     {"nEZoom":3},"nChannel":0}]}}</pre>	nEZoom	2: 3:	ON OFF			

#### Noise Reduction

Camera Settings					
NR-2D	{"SetEnv":{"VideoParam":[{"stNR": {"noise2D":0},"nChannel":0}]}}	noise2D	[0, 8]		
NR-3D	<pre>{"SetEnv":{"VideoParam":[{"stNR":     {"noise3D":0},"nChannel":0}]}}</pre>	noise3D	[0, 8]	0: OFF 8: Auto	
Dynamic Hot Pixel	<pre>{"SetEnv":{"VideoParam":[{"stNR":     {"dhotpixel":3},"nChannel":0}]}}</pre>	dhotpixel	[0, 5]	0: OFF	
Style	{"SetEnv":{"VideoParam":[{"stColor": {"nStyleInx":0},"nChannel":0}]}}	nStyleInx	[0, 4]	0: Default 1: Normal 2: Clarity 3: Bright 4: Soft	

#### Video OSD

Video OSD					
Get video parameters					
Code	{"GetEnv":{"VideoOsd":{"nChannel":-1}}}	{"GetEnv":{"VideoOsd":{"nChannel":-1}}}			
Set set video parameters	5				
Code	<pre>{"SetEnv":{"VideoOsd":[{"stTime":{"bEnable":1,"nIndex":0,"nXPos":0,"szText":"","nYPos":10000, "stFtColor":{"byAlpha":128,"byRed":255,"byGreen":255,"byBlue":255},"stBkColor":{"byAlpha":0, "byRed":0,"byGreen":0,"byBlue":0}},"stTitle":{"bEnable":0,"nIndex":0,"nXPos":0,"szText":"", "nYPos":0,"stFtColor":{"byAlpha":128,"byRed":255,"byGreen":255,"byBlue":255},"stBkColor": {"byAlpha":0,"byRed":0,"byGreen":0,"byBlue":0}},"nChannel":0}]}}</pre>				
NOTE: All params can be	saved by this command and also you can s	et one param alone.			
Function	Code	Command	Setting		
Show Time	{"SetEnv":{"VideoOsd":[{"stTime": {"bEnable":1},"nChannel":0}]}}	bEnable	0: Not show 1: Show		
Show Title	{"SetEnv":{"VideoOsd":[{"stTitle": {"bEnable":1},"nChannel":0}]}}	bEnable	0: Not Show 1: Show		

#### Video OSD

Function	Code	Command	Setting
Time FontColor	{"SetEnv":{"VideoOsd":[{"stTime":{"stFtColor":	byAlpha	128
	<pre>{"byAlpha":128,"byRed":255,"byGreen":255,"byBlue":0}}, "nChannel":0}]}}</pre>	white	rgb (255,255,255)
		black	rgb (0,0,0)
		yellow	rgb (255,255,0)
		red	rgb (255,0,0)
		blue	rgb (0,0,255)
Title FontColor	{"SetEnv":{"VideoOsd":[{"stTitle":{"stFtColor":	byAlpha	128
	{"byAlpha":128,"byRed":255,"byGreen":255,"byBlue":0}}, "nChannel":0}]}}	white	rgb (255,255,255)
		black	rgb (0,0,0)
		yellow	rgb (255,255,0)
		red	rgb (255,0,0)
		blue	rgb (0,0,255)
OSD Offsetx pos	Time: {"SetEnv":{"VideoOsd":[{"stTime": {"nXPos":9200},"nChannel":0}]}}	nXPos	[0, 10000]
	Title: {"SetEnv":{"VideoOsd":[{"stTitle": {"nXPos":9200},"nChannel":0}]}}		
OSD Offsety pos	Time: {"SetEnv":{"VideoOsd":[{"stTime": {"nYPos":1200},"nChannel":0}]}}	nYPos	[0, 10000]
	Title: {"SetEnv":{"VideoOsd":[{"stTitle": {"nYPos":1200},"nChannel":0}]}}		

OSD Font Size		
Get OSD font size para	meters	
Code	{"GetEnv":{"TTFFontSize":{"nChannel":-1}}}	
Set video parameters		
Code	{"SetEnv":{"TTFFontSize":{"nFontSize":[48,48],"bAutoSize":1}}}	



OSD Font Size				
Function	Code		Command	Setting
			bAutoSize	0: off,1: on
			nFontSize	[8,200]

### **Output Format**

Get video out pa	ramatara			
Code		Out":{"nChannel":-1}}}		
Set video out par	ameters			
Code		Out":{"nNetMode":2,"emVoutForm 26,25,20,21,22,23,24]}}}	at":9,"byFormatList"	':
Function	Code	Command	Setting	
		nNetMode: default value 2, do not modify it	default value 2, do not – HD output + SD network	
		emVoutFormat: Setting the current video out format.	10: 9: 4: 3:	1080P60 1080P50 1080P30 1080P25
			8:	1080160
			7:	1080I50
			6:	720P60
			5:	720P50
			26:	720P30
			25:	720P25
			20:	1080P59.94
			21:	1080I59.94
			22:	1080P29.97
			23:	720P59.94
			24:	720P29.97

#### SRT

SRT		
Get network SRT parameters		
Code	{"GetEnv":{"NetWork":{"nChannel":-1}}}	
Set network SRT parameters		

SRT			
Code {"SetEnv":{"NetWork":{"stSrt":{"wSrtLen":0,"wSrtPort":9000,"szSrtPin":"xxxxxxxxx"}}}}			
Function	Code	Command	Setting
crypto key length in bytes		wSrtLen	[0-32]



SRT		
Port SRT	wSrtPort	Default 9000
Password stream encryption	szSrtPin	user-defined

## Network

### Network configure and port settings

Network Configure			
Get network port parameters			
Code	{"GetEnv":{"NetWork":{"nChann	el":-1}}}	
Set network port parameters	5		
Code	<pre>{"SetEnv":{"NetWork":{"stNetPort":     {"wPortSoap":1936,"wPortData":3000,"wPortWeb":80,"wPortRtsp":554,"wPortVisca":     1259,"wPortOnvif":2000,"wPortRtmp":1935}}} You can also set one of these parameters like this:     {"SetEnv":{"NetWork":{"stNetPort":{"wPortSoap":1936}}}</pre>		
Port Settings			
Function	Code	Command	Setting
Port Data		wPortData	[0, 65535]
Port Web		wPortWeb	[0, 65535]
Port Onvif		wPortOnvif	[0, 65535]
Port Soap	wPortSoap [0, 65535]		
Port Rtmp		wPortRtmp	[0, 65535]
Port Rtsp		wPortRtsp	[0, 65535]
Port Visca		wPortVisca	[0, 65535]

### Ethernet

Ethernet			
Get Ethernet para	neters		
Code	{"GetEnv":{"NetWork":{"nChannel":-1}}}		
Set Ethernet parar	neters		
Code	"SetEnv":{"NetWork":{"stEth": [{"byValid":5,"szIPAddr":"192.168.5.126","szSubMask":"255.255.255.0","szMacA "szGateway":"192.168.5.1","bDefault":1}]}}}	ddr":"E4:77:D4:0	1:8A:49",
Function	Code	Command	Setting
DHCP	{"SetEnv":{"NetWork":{"stEth":[{"byValid":5}]}}}	byValid	5:off 7:on
IP Address	{"SetEnv":{"NetWork":{"stEth":[{"szIPAddr":"192.168.5.127"}]}}}		
Subnet Mask	{"SetEnv":{"NetWork":{"stEth":[{"szSubMask":"255.255.255.0"}]}}}		
Default Gateway	{"SetEnv":{"NetWork":{"stEth":[{"szGateway":"192.168.5.1"}]}}}		

#### DNS

DNS			
Get dns parameters			
Code {"GetEnv":{"NetWork":{"nChannel":-1}}}			
Set dns parameters			
Code	{"SetEnv":{"NetWork":{"stDns":{"szDns1":"8.8.8.8","szDns2":"0.0.0.0"}}}}		
Function	Code	Command	Setting
Preferred DNS Server	{"SetEnv":{"NetWork":{"stDns": {"szDns1":"8.8.8.8"}}}}		
Alternative DNS Server	{"SetEnv":{"NetWork":{"stDns": {"szDns2":"8.8.8.8"}}}}		

### NDI

NDI			
Get NDI parameter	S		
Code	"GetEnv":{"NetWork":{"nChannel":-1}}}		
Set NDI parameter	s		
Code {"SetEnv":{"NetWork":{"stNdi": {"szNdiName":"Avonic-82342","bNdiControlEnable":1,"bNdiEnable":1,"szNdiGroup":"public"}}			
Function	code	command	setting
Ndi Enable	{"SetEnv":{"NetWork":{"stNdi":{"bNdiEnable":1}}}	bNdiEnable	0: off
			1: on
Ndi Control	{"SetEnv":{"NetWork":{"stNdi":{"bNdiControlEnable":1}}}	bNdiControlEnable	0: off
			1: on
Ndi Name	{"SetEnv":{"NetWork":{"stNdi": {"szNdiName":"Avonic-82342"}}}	szNdiName	user-defined
Ndi Group	{"SetEnv":{"NetWork":{"stNdi":{"szNdiGroup":"public"}}}	szNdiGroup	user-defined

## System

System Configure				
Get sysattr parameters	Get sysattr parameters			
Code	Code {"GetEnv":{"SysAttr":{"nChannel":-1}}}			
Set sysattr parameters				
Code	<pre>{"SetEnv":{"SysAttr":     {"nLanguage":0,"szDeviceID":"1","emVideoStandard":1,"szDevName":"testname"}}}</pre>			
Function	Code Command Setting		Setting	
Device Name		szDevName	user-defined, cannot use white space	
Device ID		szDeviceID	cannot modify	
Language		nLanguage	0: Simplified Chinese 2: English	



#### License

License	
Get License parameters	
Code	:{"QueryState":{"QueryLicenseState":{}}}
Set License parameters	
Code	{"SetEnv":{"LicenseKey":{"bLicenseEnable":0,"szKeyText":"483B4EB1D0"}}}

### Time

SysTime		
Get system time parame	ters	
Code	{"QueryState":{"QuerySysTime":{}}}	
Set system time parameters		
Code	<pre>{"SetEnv":{"SysTime":{"nDateSprtr":2,"nDateFormat":0,"nZone":1,"nHourType":0,"stNtp": {"bEnable":1,"nHostPort":123,"nUpdateInterval":2,"szHostUrl":"ntp4.aliyun.com"}}}</pre>	

SysTime			
Function	Code	Command	Setting
Date Format	{"SetEnv":{"SysTime":{"nDateFormat":0}}}	nDateFormat	0: YYYY-MM-DD 1: MM-DD-YYYY 2: DD-MM-YYYY
Date Sprtr	{"SetEnv":{"SysTime":{"nDateSprtr":0}}}	nDateSprtr	0:. 1:- 2:/

SysTime			
Function	Code	Command	Setting
Zone	{"SetEnv":{"SysTime":{"nZone":0}}}	nZone [0-32]	0: GMT 1: GMT+01:00 2: GMT+02:00 3: GMT+03:00 4: GMT+03:30 5: GMT+04:00 6: GMT+04:30 7: GMT+05:00 13: GMT+08:00 20: GMT-01:00 31: GMT-11:00 32: GMT-12:00
Hour Type	{"SetEnv":{"SysTime":{"nHourType":0}}}	nHourType	0: 24 Hours 1: 12 Hours
NTP Enable	{"SetEnv":{"SysTime":{"stNtp":{"bEnable":1}}}	bEnable	0: off, 1: on



SysTime			
Update Interval	{"SetEnv":{"SysTime":{"stNtp":{"nUpdateInterval":2}}}	nUpdateInterval	[1, 10]
Host URL	{"SetEnv":{"SysTime":{"stNtp":{"szHostUrl":"time.nist.gov"}}}	szHostUrl	user-defined, ntp server address
Host Port	{"SetEnv":{"SysTime":{"stNtp":{"nHostPort":123}}}}	nHostPort	user-defined: [0, 65535]
Time Settings	Synchronize with computer time or set manual: {"SysCtrl":{"SetTime":{"bTimeType":1,"nZone":19, "stDateTime":{"dwYear":2018,"byHour":15, "byMinute":38,"byDay":1,"byMonth":11,"bySecond":2}}}		
Synchronize NTP Server	{"SysCtrl":{"SyncNtp":""}}		

#### User

SysUser			'
Get sysuser parameters			
Code	{"GetEnv":{"SysUser":{}}}		
Set sysuser parameters			
Code	Code {"SetEnv":{"SysUser":{"stUsers":[{"nUserType":0,"szUserName":"admin","szPassword":"admin"}, {"nUserType":1,"szUserName":"user1","szPassword":"user1"}, {"nUserType":1,"szUserName":"user2","szPassword":"user2"}]}}		
Function	Code	Command	Setting
Authority		nUserType	0: admin 1: user1 or user 2
User Name		szUserName	user-defined: no white space
Password		szPassword	user-defined, no white space. This command must set three users at the same time.

### Update

Update	
Get update para	meters
Code	{"QueryState":{"QueryVersion":{}}}
Code       Get the return value and split it like this:         szText.Format(``%d.%d.%d%d-%d-%d'', (stVersion.dwCamVersion >> 16) & 0xFF,         (stVersion.dwCamVersion >> 8) & 0xFF, (stVersion.dwCamVersion 0xFF), (stVersion.dwCamDate >> 16) &         0xFFFF, (stVersion.dwCamDate >> 8) & 0xFF,(stVersion.dwCamDate & 0xFF));	
Set update parameters	
Not supported update with API, you can do this through webpage.	

#### Default and Reboot

Default	
Code	{"SysCtrl":{"Default":{}}}
Reboot	
Code	{"SysCtrl":{"Reboot":{}}}

The URL supports to set all params at one time and also can set one of them through split URL into one other command. Different commands can be found at different settings.

i

# Appendix D - CMOS Image Sensor Characteristics

The following occurrences that may appear in images are specific to CMOS (Complementary Metal Oxide Semiconductor) image sensors. They do not indicate malfunctions.

#### White Flecks

Although the CMOS image sensors are produced with high-precision technologies, fine white flecks may be generated on the screen in rare cases. These flecks are caused by natural and / or artificial radition, which causes a "false exposure" on the image sensor. The shape of these spots may vary from dots to lines or other —sometimes irregular— shapes.

These spots occur in random locations of the image, occur only in a single frame and are more visible in dark images. This is a principle issue of all image sensors and *is not a malfunction*.

The white flecks especially tend to be seen in the following cases:


- When operating at a high ambient temperature
- When you have raised the gain (sensitivity)

The white flecks may be reduced by turning the camera off, then on again.

#### Aliasing

When fine patterns, stripes, or lines are shot, they may appear jagged or flickering. *Aliasing* refers to the effect that is produced when a signal is imperfectly reconstructed from the original signal. It occurs when a signal is not sampled at a high enough frequency to create an accurate representation.

This effect is shown in the following example of a sinusoidal function:



In this example, the dots represent the sampled data and the curve represents the original signal. Because there are not enough sampled data points, the resulting pattern produced by the sampled data is a poor representation of the original.

#### Focal Plane

Owing to the characteristics of the pickup elements (CMOS image sensors) for reading video signals, subjects that quickly move across the screen may appear slightly skewed (i.e., tilted to the left or right, depending on the direction of camera or subject movement). Since a CMOS sensor typically captures one row at a time within approximately 1/60th or 1/50th of a second (depending on the refresh rate), it may result in a "rolling shutter" effect. In such cases, the image is skewed.

#### Flash Band

If you film a strobe or quick-flashing light, brightness may differ between the upper and lower halves of the picture. See the Focal Plane explanation above for a clarification of this occurrence.

#### Flicker

i

If you are recording under lighting that is produced by discharge tubes (such as fluorescent, sodium or mercury-vapor lamps), the screen may flicker, colors may vary, or horizontal stripes may appear distorted. In such cases, set the *anti-flicker* setting to 'on'.

Depending on lighting types, such occurrences may not be improved with the anti-flicker setting. It is recommended to set the shutter speed to 1/100s in areas of 50 Hz power supply frequency, and to 1/60s in areas of 60 Hz power supply frequency.



Avonic PTZ Camera 20x zoom CM70-NDI Version 1.2 © March 2022 Exportweg 11a 2645 ED Delfgauw The Netherlands +31(0)15 7112 712

info@avonic.com www.avonic.com